



DolciSSima 2.0

USER'S MANUAL



76041004 DolciSSima 2.0

Data	Rev.	Autore	Visto	Approvato
10/04/2014	1.0	AL		

SUMMARY

1	GENERAL INFORMATION	17
1.1	PRODUCT DESCRIPTION.....	17
1.2	IDENTIFICATION.....	17
1.3	GENERAL WARNINGS	17
1.4	WARRANTY.....	18
1.4.1	WARRANTY PERIOD	18
1.4.2	RESPONSIBILITY	18
1.4.3	LOSS OF WARRANTY	18
1.4.4	JURISDICTION	19
2	INSTRUCTIONS FOR USE	21
2.1	PREVENTION OF MISUSE REASONABLY EXPECTED	21
2.2	CAUTIONS ON USING THE MANUAL.....	21
2.2.1	READ THIS FIRST	22
2.2.2	DISCLAIMER	22
2.2.3	IMPORTANCE OF THE TEST REPORT	22
3	PREPARING THE PRINTING SYSTEM.....	23
3.1	PREPARATION OF THE LOCATION.....	23
3.2	INSTALLING THE PRINTER.....	23
3.2.1	UNPACKING	23
3.2.2	LEVELING	24
3.2.3	REMOVING THE HEAD CART MOUNTING BLOCK.....	24
3.2.4	ELECTRICAL CONNECTION	25
3.2.5	CARTRIDGES INSTALLATION	26
3.2.6	ENTERING THE TRAY	27
3.3	INSTALLATION OF SOFTWARE	31
3.3.1	INSTALLING WINDOWS PRINTER DRIVER	31
3.3.2	SETTING THE WINDOWS PRINTER DRIVER	31
3.4	INSTALLING THE RIP PRINTER (OPTIONAL)	33
4	FIRST START	38
4.1	PRINTING WITH WINDOWS DRIVER	38
4.2	SETTING UP A PRINTING QUEUE IN IRIDE.....	38

4.3	LOAD A PRODUCT TO PRINT	49
4.4	CONTROLS DURING OPERATION	50
4.5	WARNINGS AND LIMITATIONS OF THE PRINTING SYSTEM.....	50
4.6	PRINTING SYSTEM STOP	51
4.6.1	SWITCH OFF	51
4.6.2	PREPARING TO STOP SYSTEM	52
4.6.3	EMERGENCY STOP	52
5	MAINTENANCE	52
5.1	DAILY ROUTINE.....	52
5.2	PERIODIC MAINTENANCE	52
5.3	HOW TO RESET CARTRIDGES AND MAINTENANCE TANK.....	53
5.4	HOW TO PERFORM A NOZZLE CHECK.....	54
5.5	HOW TO CLEAN THE PRINT HEAD.....	56
5.5.1	SOFT CLEANING	56
5.5.2	POWER CLEANING	57
6	IMPORTANT GENERAL WARNINGS.....	59
6.1	STORAGE AND OPERATING CONDITIONS	59
6.2	IN CASE OF DOWNTIME.....	59
6.3	EXPIRATION OF INKS.....	59
6.4	REMOVAL OF INKS.....	59
6.5	CONSERVATION OF INKS	60
6.6	CARTRIDGES AND BOTTLES MAINTENANCE	60
7	SYSTEM REQUIREMENTS	61
8	TROUBLESHOOTING	62
9	TECHNICAL SUPPORT.....	62
10	TECHNICAL DATA.....	63
11	LESEPIDADO REFERENCES	64

ANNEXES

- DECLARATION OF CONFORMITY
- MINUTES OF DELIVERY, INSTALLATION, TRAINING, TESTING

Dear Customer,

Thank you for purchasing a Lesepidado product. With over ten years of experience in the field of printing food and a range of products with world-leading technology and ease of use, Lesepidado is able to offer the best solutions for the industries, laboratories, business.

WARNING:

THIS PRODUCT HAS BEEN DESIGNED FOR PROFESSIONAL USE ONLY.

**THIS MANUAL IS AN INTEGRAL PART OF THE PRODUCT
AND MUST BE KEPT WITH CARE FOR ALL THE LIFE OF THE PRODUCT.**

THE INFORMATION CONTAINED HEREIN ARE VERY IMPORTANT
FOR PROPER INSTALLATION, OPERATION AND MAINTENANCE
IN SAFETY OF YOUR SYSTEM.

IT IS RECOMMENDED THAT ALL THE STAFF THAT WORK AND / OR WHO IS RESPONSIBLE
OF THE USE AND MAINTENANCE OF THE SYSTEM CAREFULLY READ
THE SECTIONS OF THIS MANUAL ON THE PRECAUTIONS, THE OPERATIONAL AND
MAINTENANCE BEFORE ANY INTERVENTION.

GENERAL SAFETY PRECAUTIONS

Make sure to read this information before setting up the machine. Please keep it in hand for future reference. Please read these safety warnings and cautions to ensure that you use the machine safely. Do not attempt to use the machine in any way not described here or in the accompanying manuals. This may cause unexpected accident, fire, or electric shock.

The following are instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment.

These must be observed for safe operation.

CHOOSING A LOCATION

- Do not place the machine close to flammable solvents such as alcohol or thinners.
- Do not install the machine in a location that is unstable or subject to excessive vibration.
- Do not install the machine in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source.
- To avoid the risk of fire or electric shocks, use the machine under the operating environment specified in Annex A.
- Do not place the machine on a thick rug or carpet.
- Do not place the machine with its back attached to the wall.

POWER SUPPLY

- Use the power cable included with the machine.
- For the machine's operating requirements, refer to Annex A
- Connect the machine to the specified power source.
- Never attempt to plug in or unplug the machine from the power supply when your hands are wet.
- Always push the plug all the way into the power outlet.
- Never damage, modify, stretch or excessively bend or twist the power cord. Do not place heavy objects on the power cord.
- Never plug the machine into a power socket that is shared with other equipment (extension lead/cord, 2- or 3-way adapter, etc.).
- Never use the machine if the power cord is bundled or knotted.
- If you detect smoke, unusual smells or strange noises around the machine, immediately unplug the machine at the power supply and call for service.
- Periodically, unplug the machine and use a dry cloth to wipe off any dust or dirt collected on the plug and the power outlet.
- If the machine is placed at a location exposed to a lot of dust, smoke, or high humidity, the dust collected on the plug absorbs moisture and may cause insulation failure and fire.

- If you hear thunder, disconnect the power supply of the machine and refrain from using it. Leaving the machine plugged in may cause fire, electric shock, or damage to the machine, depending on the thunder storm.
- Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power cord if necessary.
- Never remove the plug by pulling on the cord. Pulling the cord may damage the power cord, leading to possible fire or electrical shock.
- Do not use an extension lead/cord.

CLEANING THE MACHINE

- Always unplug the machine from the power outlet before cleaning the machine.
- Use a damp cloth to clean the machine. Never use flammable solvents such as alcohol, benzene or thinners.
- If flammable solvents come in contact with electrical components inside the machine, it could cause a fire or electric shock.
- If you accidentally switch the machine on while cleaning it, you could injure yourself or damage the machine.

MAINTAINING THE MACHINE

- Do not attempt to disassemble or modify the machine. There are no user serviceable parts inside the machine.
- The machine contains high-voltage components. Never attempt any maintenance procedure not described in this information.
- Do not connect other than recommended devices to a connector on the machine (the cable connector or the USB port etc.). It could cause a fire or electric shock.

WORKING AROUND THE MACHINE

- Do not use highly flammable sprays near the machine. This could cause a fire or electric shock if the spray comes into contact with electrical components inside the machine.

- This product emits low level magnetic flux. If you use a cardiac pacemaker and feel abnormalities, please move away from this product and consult your doctor.
- Never put your hands or fingers in the machine while it is printing. When moving the machine, carry the machine at both ends.
- In case the machine weighs more than 14 kg, it is recommended to have two people lifting the machine. Accidental dropping of the machine causes injury. For the machine's weight, please refer to Annex A.
- Do not place any object on the machine. Especially do not place metal objects (paper clips, staples, etc.) or containers of flammable solvents (alcohol, thinners, etc.) on top of the machine.
- Be careful to prevent foreign objects from entering the inside of the machine.
- If any foreign objects (metal or liquid) fall into the machine, press the power button to turn the machine off, unplug the power cord, and call for service.
- Do not transport or use the machine on a slant, vertically or upside-down, as the ink may leak and damage the machine.
- For the multifunction printer: when loading a thick book on the Platen Glass, do not press hard on the Document Cover. The Platen Glass may break and cause injury.

PRINT HEADS, INK TANKS AND CARTRIDGES

- Keep ink tanks out of the reach of children.
- In case ink is accidentally licked or swallowed, rinse out mouth or give one or two glasses of water to drink.
- If irritation or discomfort occurs, obtain medical advice immediately. In case ink gets in contact with eyes, rinse with water immediately.
- In case ink gets in contact with skin, wash with soap and water immediately. If irritation to eyes or skin persists, obtain medical advice immediately.
- Never touch the electrical contacts on a Print Head or cartridges after printing. The metal parts may be very hot and could cause burns.
- Do not throw ink tanks and cartridges into fire.
- Do not attempt to disassemble or modify the Print Head, ink tanks and cartridges.

EUROPEAN UNION (AND EEA) ONLY.

This product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and

your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.

(EEA: Norway, Iceland and Liechtenstein)

CONSIGNES GENERALES DE SECURITE

Veillez à lire ces informations avant d'installer la machine. Conservez-les à portée de main afin de pouvoir vous y reporter ultérieurement. Veuillez lire ces précautions de sécurité et ces avertissements pour vous assurer d'utiliser la machine en toute sécurité. Ne tentez pas de l'utiliser d'une manière autre que celle décrite ici ou dans les manuels fournis. Sinon, il pourrait y avoir un risque d'accident, d'incendie ou d'électrocution.

Ci-dessous se trouvent des instructions dont le non-respect peut entraîner la mort ou des blessures graves provoquées par un fonctionnement incorrect du matériel. Ces instructions doivent être respectées afin de garantir un fonctionnement sûr.

CHOIX D'UN EMPLACEMENT

- Ne placez pas la machine près de solvants inflammables comme certains alcools ou diluants.
- N'installez pas la machine dans un endroit instable ou soumis à des vibrations excessives.
- Évitez d'installer la machine à l'extérieur ou dans un endroit exposé à l'humidité ou à la poussière, à un ensoleillement direct ou à proximité d'une source de chaleur.
- Pour éviter tout risque d'incendie ou d'électrocution, utilisez la machine dans l'environnement de fonctionnement spécifié dans le Annexe A.
- Ne placez pas la machine sur une moquette ou un tapis épais.
- N'adossez pas l'arrière de la machine au mur.

ALIMENTATION

- Utilisez le cordon d'alimentation secteur fourni avec la machine.
- Pour connaître la configuration requise pour le fonctionnement de la machine, reportez-vous au Annexe A.
- Branchez la machine sur la source d'alimentation spécifiée.
- Ne tentez jamais de brancher ni de débrancher la machine les mains mouillées. Veillez à toujours enfoncer totalement la fiche dans la prise de courant.
- Veillez à ne jamais endommager, modifier, étirer, plier ou tordre de façon excessive le cordon d'alimentation. Ne placez pas d'objets lourds sur le cordon d'alimentation.
- Ne branchez jamais la machine dans une prise de courant déjà utilisée pour un autre équipement (prolongateur, rallonge, multiprise deux ou trois prises, etc.).
- N'utilisez jamais la machine si le câble d'alimentation n'est pas complètement déroulé ou s'il est emmêlé.
- Si vous détectez de la fumée, des odeurs inhabituelles ou des bruits étranges autour de la machine, débranchez-la immédiatement de l'alimentation et appelez le service de maintenance. Débranchez de

temps à autre la machine et, à l'aide d'un chiffon sec, enlevez la poussière ou la saleté qui aurait pu se déposer sur la prise secteur ou la prise murale.

- Lorsque la machine est exposée à une grande quantité de poussière ou de fumée ou à un taux d'humidité élevé, la poussière qui se dépose sur la prise absorbe l'humidité, ce qui peut détériorer les matériaux isolants et provoquer un incendie.
- En cas d'orage, débranchez la prise secteur de la machine et abstenez-vous de l'utiliser. Le fait de la laisser branchée peut provoquer un incendie ou une électrocution ou endommager la machine, selon l'intensité de l'orage.
- Vérifiez que la zone autour de la prise est dégagée en permanence afin de pouvoir facilement débrancher le cordon d'alimentation si nécessaire.
- Ne retirez jamais la fiche en tirant sur le cordon. Tirer sur le cordon peut endommager le cordon d'alimentation et entraîner un incendie ou une électrocution.
- N'utilisez pas de rallonge.

NETTOYAGE DE LA MACHINE

- Débranchez toujours la machine de la prise de courant avant de la nettoyer.
- Utilisez un chiffon humide pour nettoyer la machine. N'utilisez jamais de solvants inflammables tels que de l'alcool, du benzène ou des diluants.
- Des solvants inflammables entrant en contact avec les composants électriques à l'intérieur de la machine peuvent provoquer un incendie ou une électrocution.
- Si vous mettez la machine accidentellement sous tension pendant l'opération de nettoyage, vous risquez de vous blesser ou d'endommager la machine.

ENTRETIEN DE LA MACHINE

- N'essayez pas de démonter ou d'apporter des modifications à la machine. La machine ne contient

aucun composant pouvant être réparé par l'utilisateur.

- Certaines parties de la machine sont sous haute tension. N'effectuez aucune procédure d'entretien autre que celles décrites dans ces informations.
- Ne connectez aucun équipement autre que les périphériques recommandés à un connecteur sur la machine (le connecteur de câble, le port d'impression directe, etc.), sinon vous risquez de provoquer un incendie ou une électrocution.

TRAVAIL AUTOUR DE LA MACHINE

- N'utilisez pas d'aérosol hautement inflammable à proximité de la machine. Un aérosol entrant en contact avec les composants électriques à l'intérieur de la machine peut provoquer un incendie ou une électrocution.
- Ce produit émet un flux magnétique de faible niveau. Si vous utilisez un stimulateur cardiaque ou pacemaker et éprouvez une sensation inhabituelle, éloignez-vous de la machine et consultez votre médecin.
- Ne placez jamais vos mains ou vos doigts dans la machine lorsqu'une impression est en cours.
- Déplacez la machine en la portant par les deux extrémités.
- Si le poids de la machine dépasse 14 kg, il est recommandé de la faire soulever par deux personnes. Vous pourriez vous blesser si vous faisiez tomber la machine par accident. Pour connaître le poids de la machine, reportez-vous au Annexe A.
- Ne placez aucun objet sur la machine. En particulier, ne placez jamais d'objets métalliques (trombones, agrafes, etc.) ou de récipients contenant des solvants inflammables (alcool, diluants, etc.) sur la machine.
- Faites attention qu'un corps étranger n'entre pas à l'intérieur de la machine.
- Si un corps étranger (métallique ou liquide) venait à glisser dans la machine, appuyez sur la touche d'alimentation pour mettre la machine hors tension, débranchez le cordon d'alimentation et appelez le service de maintenance.
- Ne transportez et n'utilisez pas la machine sur un plan incliné, à la verticale ou à l'envers, car l'encre risque de couler et d'endommager la machine.
- Pour l'imprimante multifonction: si vous placez un livre épais sur la vitre d'exposition, n'appuyez pas trop fort sur le capot des documents. La vitre d'exposition pourrait se briser et entraîner des blessures.

TÊTES D'IMPRESSION / RÉSERVOIRS D'ENCRE ET CARTOUCHES

- Gardez les réservoirs d'encre hors de portée des enfants.
- En cas d'absorption accidentelle d'encre par la bouche, par léchage ou ingestion, rincez abondamment la bouche ou faites boire un verre d'eau ou deux.
- En cas d'irritation ou de gêne, consultez immédiatement un médecin. En cas de contact avec les yeux, rincez immédiatement avec de l'eau.
- En cas de contact avec la peau, lavez immédiatement avec de l'eau et du savon.
- Si l'irritation des yeux ou de la peau persiste, consultez immédiatement un médecin.
- Ne touchez jamais les contacts électriques de la tête d'impression ou des cartouches après une impression. Les parties métalliques peuvent être très chaudes et vous brûler.
- Ne jetez pas les réservoirs d'encre ni les cartouches au feu.
- N'essayez pas de démonter la tête d'impression, les réservoirs d'encre ou les cartouches, ni d'y apporter des modifications.

UNION EUROPÉENNE (ET EEE) UNIQUEMENT.

Conformément à la directive DEEE (2002/96/CE) et à la réglementation de votre pays, ce produit ne doit pas être jeté avec les ordures ménagères. Vous devez le déposer dans un lieu de ramassage prévu à cet effet, par exemple, un site de collecte officiel des équipements électriques et électroniques (EEE) en vue de leur recyclage ou un point d'échange de produits autorisé qui est accessible lorsque vous faites l'acquisition d'un nouveau produit du même type que l'ancien. Toute déviation par rapport à ces recommandations d'élimination de ce type de déchet peut avoir des effets négatifs sur l'environnement et la santé publique car ces produits EEE contiennent généralement des substances qui peuvent être dangereuses. Parallèlement, votre entière coopération à la bonne mise au rebut de ce produit favorisera une meilleure utilisation des ressources naturelles. Pour obtenir plus d'informations sur les points de collecte des équipements à recycler, contactez votre mairie, le service de collecte des déchets, le plan DEEE approuvé ou le service d'enlèvement des ordures ménagères.

(EEE : Norvège, Islande et Liechtenstein)

ALLGEMEINE SICHERHEITSHINWEISE

Bitte lesen Sie diese Informationen vor der Einrichtung des Geräts. Bewahren Sie sie so auf, dass Sie sie bei Bedarf zur Hand haben. Lesen Sie sich die Sicherheitshinweise sorgfältig durch, um den sicheren Betrieb des Geräts zu gewährleisten. Verwenden Sie das Gerät ausschließlich gemäß den Anweisungen, die hier oder in den begleitenden Handbüchern des Geräts gegeben werden. Bei unsachgemäßer oder zweckfremder Verwendung des Geräts besteht Unfall-, Brand- und Stromschlaggefahr.

Die Nichtbeachtung der folgenden Anweisungen kann zu tödlichen oder anderen schweren Verletzungen durch unsachgemäße Handhabung des Geräts führen.

Daher müssen diese Anweisungen aus Sicherheitsgründen befolgt werden.

AUFSTELLORT

- Stellen Sie das Gerät nicht in der Nähe von entzündlichen Lösungsmitteln (z. B. Alkohol oder Verdünnung) auf.
- Stellen Sie das Gerät nur an einem Ort auf, an dem es stabil steht und keinen übermäßigen Schwingungen ausgesetzt ist.
- Wählen Sie einen Standort, an dem das Gerät vor hoher Luftfeuchtigkeit, Staub, Hitze (z. B. von einem Heizkörper) und direkter Sonneneinstrahlung geschützt ist.
- Zur Vermeidung von Brand und Stromschlag darf das Gerät nur in einer Betriebsumgebung aufgestellt werden, die den Angaben unter Annex A.
- Stellen Sie das Gerät nicht auf einen hochflorigen Teppich.
- Stellen Sie das Gerät nicht mit der Rückseite gegen die Wand.

NETZANSCHLUSS

- Verwenden Sie nur das mit dem Gerät gelieferte Netzkabel.
- Bezüglich der Betriebsanforderungen des Geräts siehe "Technische Daten" im Abschnitt Inbetriebnahme. Schließen Sie das Gerät an die vorgeschriebene Stromversorgung an.
- Fassen Sie den Netzstecker des Geräts beim Ein- und Ausstecken in die Steckdose unter keinen Umständen mit feuchten Händen an.
- Stecken Sie den Stecker immer vollständig in die Steckdose.
- Das Netzkabel darf nicht beschädigt, verändert, gedehnt oder übermäßig geknickt oder verdreht werden. Achten Sie darauf, dass keine schweren Objekte auf dem Netzkabel stehen oder liegen.
- Schließen Sie das Gerät nicht gemeinsam mit anderen Geräten (Verlängerungskabel, Mehrfachstecker usw.) an eine Steckdose an.
- Verwenden Sie das Gerät nicht mit zusammengebundenem Netzkabel.
- Wenn Rauch, ungewöhnliche Gerüche oder Geräusche aus dem Gerät dringen, ziehen Sie umgehend das Netzkabel des Geräts aus der Steckdose, und wenden Sie sich an den Kundendienst von LesePIDADO. Ziehen Sie regelmäßig den Stecker des Geräts aus der Steckdose, und wischen Sie mit einem trockenen Tuch Staub und Schmutz ab, die sich an Stecker und Steckdose abgelagert haben. Wenn

das Gerät in einer Umgebung mit starker Staub- oder Rauchentwicklung oder hoher Luftfeuchtigkeit aufgestellt ist, nimmt der auf dem Stecker abgelagerte Staub Feuchtigkeit auf, wodurch es zu Isolationsfehlern und

- Branden kommen kann.
- Ziehen Sie bei einem Unwetter das Netzkabel des Geräts aus der Steckdose, und
- verwenden Sie das Gerät nicht! Bei Missachtung besteht bei einem Blitzeinschlag in der Umgebung die Gefahr von Brand, Stromschlag oder einer Beschädigung des Geräts.
- Achten Sie darauf, dass der Bereich um die Steckdose jederzeit zugänglich ist, damit Sie den Netzstecker bei Bedarf problemlos herausziehen können.
- Ziehen Sie den Stecker niemals durch Ziehen am Kabel aus der Steckdose.
- Durch Ziehen des Netzsteckers kann das Netzkabel beschädigt werden, was zu Branden oder elektrischen Schlägen führen kann.
- Verwenden Sie kein Verlängerungskabel.

REINIGUNG DES GERÄTS

- Verwenden Sie zum Reinigen des Geräts ein feuchtes Tuch. Verwenden Sie keinesfalls entzündliche Lösungsmittel wie Alkohol, Benzol oder Verdünnung.
- Wenn entflammbare Reinigungsmittel mit elektrischen Teilen im Inneren des Geräts in Kontakt kommen, kann dies einen Brand oder Stromschlag verursachen.
- Ziehen Sie vor dem Reinigen immer den Netzstecker des Geräts.
- Wenn Sie das Gerät während der Reinigung versehentlich einschalten, können Sie sich verletzen oder das Gerät beschädigen.

WARTUNG DES GERÄTS

- Versuchen Sie keinesfalls, das Gerät zu zerlegen oder Änderungen daran vorzunehmen. Im Inneren des Geräts befinden sich keine vom Benutzer zu wartenden Teile.
- Das Gerät enthält Komponenten, die unter hoher Spannung stehen. Versuchen Sie unter keinen Umständen Wartungsarbeiten durchzuführen, die nicht in diesen Informationen beschrieben sind.
- An den Anschluss am Gerät (den Kabelanschluss oder den Anschluss für den Direktdruck) dürfen ausschließlich empfohlene Geräte angeschlossen

werden. Beim Anschluss anderer Geräte besteht Brand- und Stromschlaggefahr, außerdem konnte das Gerät beschädigt werden.

ARBEITEN IN DER NAHE DES GERÄTS

- Verwenden Sie in der Nähe des Geräts keine hoch entzündlichen Sprays.
- Wenn das Spray mit den elektrischen Komponenten innerhalb des Geräts in Berührung kommt, kann dies einen Brand oder Stromschlag verursachen.
- Dieses Gerät erzeugt geringe magnetische Feldschwankungen. Wenn Sie einen Herzschrittmacher tragen und Herzrhythmusstörungen auftreten, entfernen Sie sich aus der Nähe des Geräts, und wenden Sie sich an Ihren Arzt.
- Greifen Sie während eines Druckvorgangs unter keinen Umständen in das Gerät. Halten Sie das Gerät immer auf beiden Seiten fest, wenn Sie es tragen.
- Falls das Gerät mehr als 14 kg wiegt, wird empfohlen, das Gerät mit zwei Personen zu tragen. Durch versehentliches Fallenlassen des Geräts werden Verletzungen verursacht.
- Bezüglich des Gewichts des Geräts siehe "Technische Daten" im Abschnitt Inbetriebnahme. Legen Sie keine Gegenstände auf das Gerät.
- Vermeiden Sie es besonders, Metallgegenstände (Büroklammern, Heftklammern usw.) oder Behälter mit entzündlichen Lösungsmitteln (Alkohol, Verdünnung usw.) auf dem Gerät abzustellen.
- Achten Sie darauf, dass keine Fremdoobjekte in das Gerät eindringen.
- Wenn ein Fremdoobjekt (Metall oder Flüssigkeit) in das Gerät gelangt, drücken Sie den Netzschalter zum Aussehallen des Geräts, ziehen Sie den Netzstecker des Druckers aus der Steckdose, und wenden Sie sich an den Kundendienst.
- Transportieren und benutzen Sie das Gerät nicht schräg, senkrecht oder kopfüber, da in diesen Stellungen Tinte austreten und das Gerät beschädigt werden kann.

ARBEITEN IN DER NAHE DES GERÄTS (FÜR MULTIFUNKTIONSDRUCKER)

- Drücken Sie den Vorlagendeckel nicht zu sehr nach unten, wenn Sie ein dickes Buch zum Kopieren oder Scannen auflegen. Die Auflagefläche könnten zerbrechen und Verletzungen verursachen.

DRUCKKOPFELTINTENBEHALTER UND PATRONEN

- Bewahren Sie Tintenbehälter außerhalb der Reichweite von kleinen Kindern auf.
- Wenn Tinte versehentlich in Kontakt mit dem Mund kommt (durch Lecken oder Verschlucken), spülen Sie

den Mund sofort mit klarem Wasser aus, oder trinken Sie ein bis zwei Glas Wasser.

- Konsultieren Sie bei Reizungen oder Beschwerden umgehend einen Arzt.
- Falls Tinte in Kontakt mit den Augen kommt, spülen Sie die Augen umgehend aus.
- Waschen Sie Tinte, die in Kontakt mit der Haut kommt, umgehend mit Wasser und Seife ab. Konsultieren Sie umgehend einen Arzt, falls eine anhaltende Reizung der Augen oder der Haut auftritt.
- Berühren Sie niemals die elektrischen Kontakte eines Druckkopfs oder von Patronen nach dem Drucken. Diese Metallteile sind möglicherweise sehr heiß, und können Verbrennungen verursachen.
- Werfen Sie die Tintenbehälter und Patronen nicht ins Feuer.
- Versuchen Sie nicht, den Druckkopf, die Tintenbehälter oder Patronen zu zerlegen oder Änderungen daran vorzunehmen.
- Maschinenlärminformations-Verordnung 3. GPSGV:
- Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäß, EN ISO 7779.

NUR EUROPÄISCHE UNION (UND EWR).

Dieses Symbol weist darauf hin, dass dieses Produkt gemäß, Richtlinie über Elektro- und Elektronik-Altgeräte (2002/96/EG) und nationalen Gesetzen nicht über den Hausmüll entsorgt werden darf. Dieses Produkt muss bei einer dafür vorgesehenen Sammelstelle abgegeben werden. Dies kann z. B. durch Rückgabe beim Kauf eines ähnlichen Produkts oder durch Abgabe bei einer autorisierten Sammelstelle für die Wiederaufbereitung von Elektro- und Elektronik-Altgeräten geschehen. Der unsachgemäße Umgang mit Altgeräten kann aufgrund potentiell gefährlicher Stoffe, die häufig in Elektro- und Elektronik-Altgeräten enthalten sind, negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben. Durch die sachgemäße Entsorgung dieses Produkts tragen außerdem Sie zu einer effektiven Nutzung natürlicher Ressourcen bei. Informationen zu Sammelstellen für Altgeräte erhalten Sie bei Ihrer Stadtverwaltung, dem öffentlich-rechtlichen Entsorgungsträger, einer autorisierten Stelle für die Entsorgung von Elektro- und Elektronik-Altgeräten oder Ihrer Müllabfuhr.

(EWR: Norwegen, Island und Liechtenstein)

PRECAUCIONES GENERALES DE SEGURIDAD

Lea detenidamente las advertencias y precauciones para usar el equipo en condiciones de plena seguridad. No intente usarlo de un modo que no est, descrito aqui o en los manuales suministrados. Esto podria provocar un accidente, incendio o de descarga elctrica imprevisto.

A continuacion presentamos instrucciones que, en caso de ser ignoradas, podrian conllevar lesiones graves o incluso mortales como consecuencia del uso incorrecto del equipo.

Sigaias al pie de la letra para que el funcionamiento sea seguro.

ELECCION DEL EMPLAZAMIENTO

- No coloque el equipo cerca de liquidos inflamables, como alcohol o disolventes.
- No instale el equipo sobre una superficie inestable o que est, expuesta a excesivas vibraciones.
- No instale el equipo en lugares hUmedos o expuestos al polvo o a la luz directa del sol, cerca de una fuente de calor o al aire libre.
- Para evitar el riesgo de incendios o de descargas elctricas, utilice el equipo en el entorno de operacion especificado en "Especificaciones" en la Guia de inicio.
- No coloque el equipo sobre una moqueta o una alfombra gruesa.
- No coloque la parte posterior del equipo pegada a la pared .

FUENTE DE ALIMENTACION

- Use el cable de alimentacion suministrado con el equipo.
- Con respecto a los requisitos de operacion del equipo, consulte "Especificaciones" en la Guia de inicio.
- Conecte el equipo a la fuente de alimentacion especificada.
- No intente nunca enchufar, ni desenchufar, el equipo a la fuente de alimentacion con las manos humedas.
- Empuje siempre el enchufe del equipo en la toma de corriente hasta el final. No daie, modifique, estire, doble o retuerza excesivamente el cable de alimentacion. No ponga objetos pesados sobre el cable de alimentacion.
- No enchufe nunca el equipo a una toma de alimentacion compartida con otro dispositivo (prolongador, adaptador de 2 o 3 tomas, etc.).
- No use el equipo si el cable de alimentacion elctrica esta enrollado o tiene nudos.
- Si detecta humo, olores extranos o ruidos poco frecuentes donde est, el equipo, desenchufelo de la toma de corriente inmediatamente y avise al servicio tecnico.
- Desenchufe periodicamente el equipo y utilice un pano seco para limpiar el polvo y la suciedad

acumulados en el enchufe y en la toma de alimentacion. Si el equipo se coloca en un lugar con mucho polvo, humo o humedad, el polvo que se acumula en el enchufe absorbe la humedad, lo que puede hacer que falle el aislamiento y se produzca un incendio.

- En caso de tormenta, desconecte el equipo de la fuente de alimentacion y no lo utilice. Si el equipo permanece enchufado, podria dar lugar a un incendio, descargas elctricas o estropearse, dependiendo de la tormenta.
- Asegurese de que el area que rodea la toma de corriente est, despejada en todo momento para que el cable de alimentacion elctrica se pueda desenchufar facilmente si fuera necesario.
- Jamas desenchufe el equipo tirando del cable.
- Si tira del cable de alimentacion puede danarlo, lo que podria causar un incendio o descarga electrica.
- No use alargadores .

LIMPIEZA DEL EQUIPO

- Utilice un pano hUmedo para limpiar el equipo. No utilice materiales inflamables como alcohol, benceno o disolventes.
- Si los liquidos inflamables entran en contacto con los componentes elctricos del interior del equipo, podrian producirse descargas elctricas o un incendio.
- Antes de limpiar el equipo, desenchufelo de la toma de corriente.
- Si el equipo se enciende accidentalmente durante la limpieza, el usuario o el equipo podrian sufrir danos.

MANTENIMIENTO DEL EQUIPO

- No intente desmontar ni modificar el equipo. Dentro del mismo no hay componentes que el usuario pueda reparar.
- El equipo contiene componentes de alta tension. No realice ninguna tarea de mantenimiento que no est, descrita en esta informacion.
- No conecte a un conector del equipo (el cable conector o el Puerto de Impresion Directa, etc.) otros dispositivos que no sean los recomendados. De lo

contrario, lo expone a un incendio o a una descarga eléctrica.

ACTIVIDADES CERCA DEL EQUIPO

- No use sprays inflamables cerca del equipo.
- Si el spray entrara en contacto con los componentes eléctricos del interior del equipo, podrían producirse descargas eléctricas o un incendio.
- Este producto emite un flujo magnético de bajo nivel. Si utiliza un marcapasos y detecta anomalías, aljese de este producto y consulte a su médico.
- No ponga las manos ni los dedos en el equipo mientras está imprimiendo.
- Cuando traslade el equipo, ag...rrelo por ambos extremos.
- En caso de que el equipo pese más de 14 kg, se recomienda que lo levanten dos personas. La caída accidental del equipo podría causar lesiones.
- Con respecto al peso del equipo, consulte "Especificaciones" en la Guía de inicio. No coloque ningún objeto sobre el equipo.
- En especial, no ponga objetos de metal (clips, grapas, etc.) ni recipientes con materiales inflamables (alcohol, disolventes, etc.) sobre el equipo.
- Tenga cuidado para evitar que entren objetos extraños en el interior del equipo.
- Si cualquier objeto extraño (metálico o líquido) cayera dentro del equipo, presione el botón de alimentación para apagar el equipo, desenchufe el cable de alimentación eléctrica y pongase en contacto con el servicio técnico.
- No transporte ni use el equipo inclinado, verticalmente o al revés, ya que se puede derramar la tinta y dañar el equipo.

ACTIVIDADES CERCA DEL EQUIPO (multifunciones)

- Cuando coloque un libro grueso en el cristal de la platina, no apriete excesivamente la cubierta de documentos. El cristal de la platina podría romperse y causar lesiones.

CABEZALES DE IMPRESION, DEPOSITOS DE TINTA Y CARTUCHOS

- Mantenga los depósitos de tinta fuera del alcance de los niños.
- Si la tinta se introduce accidentalmente en la boca, se chupa o ingiere, se debe enjuagar la boca o beber un par de vasos de agua.
- Si se produce irritación o alguna molestia, consulte inmediatamente con un médico. Si la tinta entra en

contacto con los ojos, aclárelos con agua de forma inmediata.

- Si la tinta entra en contacto con la piel, lávela con agua y jabón inmediatamente.
- Si persiste la irritación en los ojos o la piel, consulte con un médico de forma inmediata.
- Nunca toque los contactos eléctricos de un cabezal de impresión ni de los cartuchos después de imprimir. Las piezas metálicas pueden estar muy calientes y causar quemaduras.
- No tire los depósitos de tinta ni los cartuchos al fuego.
- No intente desarmar ni modificar el cabezal de impresión, los depósitos de tinta, ni los cartuchos.

SOLO PARA LA UNION EUROPEA (Y LA EEA).

Este producto no debe desecharse con los desperdicios del hogar, de acuerdo con la directiva WEEE (2002/96/EC) Y con la legislación nacional. Este producto debería entregarse en uno de los puntos de recogida designados, como por ejemplo, intercambiando uno por otro al comprar un producto similar o entregándolo en un lugar de recogida autorizado para el reciclado de equipos electrónicos (EEE). La manipulación inapropiada de este tipo de desechos podría tener un impacto negativo en el entorno y la salud humana, debido a las sustancias potencialmente peligrosas que normalmente están asociadas al EEE. Al mismo tiempo, su cooperación a la hora de desechar correctamente este producto contribuirá a la utilización efectiva de los recursos naturales. Para más información acerca de donde puede desechar el equipo para su reciclado, pongase en contacto con las autoridades locales, con las autoridades encargadas de los desechos, con un plan WEEE autorizado o con el servicio de recogida de basuras para hogares.

PRECAUZIONI PER LA SICUREZZA

Per essere certi di utilizzare la stampante in modo sicuro, leggere le avvertenze e gli avvisi riportati nelle presenti istruzioni. Non usare la stampante in modalità diverse da quelle descritte qui o nei relativi manuali. Ciò può causare danni imprevisti, incendi o scosse elettriche.

La mancata osservanza delle seguenti istruzioni può causare il decesso o gravi lesioni personali dovute a un uso non corretto dell'apparecchiatura.

Il rispetto delle istruzioni garantisce un funzionamento sicuro.

SCelta DELLA POSIZIONE

- Non posizionare la stampante in prossimità di solventi infiammabili come alcool o diluenti.
- Non posizionare la stampante su un piano instabile o soggetto a vibrazioni eccessive.
- Non posizionare la stampante in luoghi umidi, polverosi, esposti alla luce diretta del sole, all'aperto o in prossimità di una fonte di calore.
- Per evitare il rischio di incendi o cortocircuiti si raccomanda di usare la stampante nelle condizioni operative specificate nell'Allegato A.
- Non posizionare la stampante su moquette o tappeti.
- Assicurarci che la parte posteriore della stampante non sia appoggiata alla parete.

ALIMENTAZIONE

- Utilizzare il cavo di alimentazione fornito con la stampante.
- Per informazioni sui requisiti operativi relativi alla stampante si prega di vedere l'Allegato A.
- Collegare inoltre la stampante al tipo di sorgente elettrica specificato.
- Non collegare o scollegare la stampante dalla presa di alimentazione con le mani bagnate.
- Inserire a fondo la spina nella presa di corrente.
- Non danneggiare, alterare, tirare, piegare eccessivamente né arrotolare il cavo di alimentazione. Non collocare oggetti pesanti su di esso.
- Non collegare la stampante a una presa elettrica a cui sono già collegate altre apparecchiature tramite prolunghe o adattatori multipli.
- Non utilizzare la stampante se il cavo di alimentazione è attorcigliato o annodato.
- In caso di fumo, odori o rumori insoliti nei pressi della stampante, scollegarla immediatamente dalla presa di alimentazione e contattare l'assistenza.
- Scollegare periodicamente la stampante e utilizzare un panno asciutto per eliminare la polvere o lo sporco accumulati sulla spina e sulla presa di corrente.
- Se la stampante viene collocata su una superficie esposta a polvere, fumo o umidità, la polvere che si accumula sulla spina potrebbe assorbire l'umidità e

danneggiare la guaina di isolamento, con conseguente rischio di incendi.

- In caso di temporali con tuoni, scollegare l'alimentazione elettrica della stampante ed evitare di utilizzarla. A seconda dell'intensità del temporale, lasciare collegata la stampante potrebbe provocare incendi, scosse elettriche o danni alla stampante stessa.
- Accertarsi che la zona attorno alla presa di corrente sia sempre libera in modo da poter scollegare facilmente il cavo di alimentazione in caso di necessità.
- Non estrarre la spina tirando il cavo. Per evitare il rischio d'incendi o di scosse elettriche si deve sfilare il cavo di alimentazione dalla presa afferrandolo esclusivamente per la spina.
- Non utilizzare prolunghe .

PULIZIA DELLA STAMPANTE

- Scollegare sempre la stampante dalla presa di corrente prima di eseguire la pulizia.
- Pulire la stampante con un panno umido. Non utilizzare solventi infiammabili quali alcool, benzene o diluenti.
- Se solventi infiammabili entrano in contatto con componenti elettrici all'interno della stampante possono provocare incendi o scosse elettriche.
- Se durante la pulizia la stampante viene accesa inavvertitamente, vi è il rischio di lesioni o danni all'apparecchiatura.

MANUTENZIONE DELLA STAMPANTE

- Non tentare di smontare o alterare la stampante. All'interno non vi sono componenti che possano essere riparati dall'utente.
- La stampante contiene componenti ad alta tensione. Non eseguire interventi di manutenzione diversi da quelli descritti in queste istruzioni.
- Connettere alle prese della stampante unicamente i dispositivi raccomandati (cavo di connessione alla porta USB ecc.). Si potrebbero verificare rischi di incendi o scosse elettriche.

OPERAZIONI IN PROSSIMITÀ DELLA STAMPANTE

- Non utilizzare prodotti spray altamente infiammabili in prossimità della stampante. Se lo spray giunge a contatto con i componenti elettrici contenuti nella stampante può provocare incendi o scosse elettriche.
- La stampante emette un flusso magnetico a basso livello. Gli utenti con pacemaker che rilevano anomalie devono allontanarsi dalla stampante e contattare il proprio medico curante.
- Non inserire le mani o le dita nella stampante mentre è in fase di stampa. Per spostare la stampante, tenerla per le due estremità.
- Se la stampante pesa più di 14 kg deve essere sollevata da due persone. Qualora cada, infatti, potrebbe causare lesioni. Per sapere quanto pesa si prega di vedere l'Allegato A.
- Non appoggiare oggetti sulla stampante. In particolare non appoggiare oggetti metallici (graffette, punti metallici e così via) o contenitori di solventi infiammabili (alcohol, diluenti e così via) sulla parte superiore della stampante.
- Si deve impedire l'ingresso di corpi estranei nella stampante.
- Qualora vi penetri un corpo estraneo metallico o liquido la si deve spegnere premendo il tasto di accensione/spegnimento, si deve quindi scollegare il cavo di alimentazione e rivolgersi infine al servizio di assistenza.
- Non trasportare né utilizzare la stampante in pendenza, in posizione verticale o capovolta, per evitare che l'inchiostro fuoriesca e provochi danni.
- Per i modelli multifunzionali: Quando si carica un libro spesso sul piano in vetro, non esercitare eccessiva pressione sul coperchio dei documenti. Il piano in vetro potrebbe rompersi e causare ferite.

TESTINE DI STAMPA, SERBATOI E CARTUCCE

- Conservare i serbatoi di inchiostro fuori dalla portata dei bambini.
- Nel caso in cui l'inchiostro venga a contatto con la bocca o ingerito la si deve sciacquare abbondantemente oppure si devono bere uno o due bicchieri di acqua.
- In caso di irritazione o malessere ci si deve rivolgere immediatamente a un medico.
- Nel caso in cui l'inchiostro entri in contatto con gli occhi, sciacquare immediatamente con acqua. Nel

caso in cui l'inchiostro entri in contatto con la pelle, lavare subito con acqua e sapone.

- Se l'irritazione agli occhi o alla pelle persiste, rivolgersi immediatamente a un medico.
- Non toccare i contatti elettrici delle testine di stampa o delle cartucce subito dopo avere stampato. I componenti metallici possono infatti raggiungere temperature molto elevate e causare ustioni.
- Non gettare i serbatoi dell'inchiostro e le cartucce nel fuoco. Non tentare di smontare o alterare la testina di stampa, i serbatoi dell'inchiostro e le cartucce.

SOLO PER UNIONE EUROPEA (ED AEE)

Questo prodotto non può essere eliminato come rifiuto ordinario in conformità alla Direttiva WEEE (2002/96/EC) e alla normativa locale vigente. Il prodotto deve essere smaltito presso i centri di raccolta differenziata, ad esempio un distributore autorizzato che applichi il principio del "vuoto a rendere", ovvero del ritiro delle vecchie apparecchiature elettriche al momento dell'acquisto delle nuove, o un deposito autorizzato allo smaltimento dei rifiuti derivanti dal disuso delle apparecchiature elettriche ed elettroniche. La gestione impropria di questo tipo di rifiuti può avere un impatto negativo sull'ambiente e sulla salute umana causato dalle sostanze potenzialmente pericolose prodotte dalle apparecchiature elettriche ed elettroniche.

Un corretto smaltimento di tali prodotti contribuirà inoltre a un uso efficace delle risorse naturali. Per ulteriori informazioni sui centri di raccolta e recupero dei rifiuti derivanti dal disuso delle apparecchiature, consultare la Direttiva WEEE e rivolgersi alle autorità competenti. Un corretto smaltimento di tali prodotti contribuirà inoltre a un uso efficace delle risorse naturali ed eviterà di incorrere nelle sanzioni amministrative di cui all'art. 50 e seguenti del D.Lgs. 22/97.

(AEE: Norvegia, Islanda e Liechtenstein)

1 GENERAL INFORMATION

1.1 PRODUCT DESCRIPTION

DolciSSima is a printer based on inkjet technology for food use.

With high print speeds and exceptional resolution DolciSSima can print high-quality photos and vector graphics on a variety of different food substrates of different heights or thicknesses. The DolciSSima printing system offers the following advanced features:

- Patented Loading System for quick loading of product;
- Adjustment to the thickness of each support;
- Large printing area 37.5 x 60 cm
- Extremely lightweight, only 55 Kg
- Water based inks safe for the environment
- Based on the latest technology of piezoelectric printhead

To make sure you get all the benefits from your DolciSSima please read all the pages that follow.

1.2 IDENTIFICATION

Brand : **LESEPIDADO**

Model : **DOLCISSIMA 2.0**

Product code: **76041004**

1.3 GENERAL WARNINGS

- Minimum age of staff is 18 years.
- All persons involved in the use and maintenance must have read and understood this manual. The operator must be certify in writing by staff knowledge of the content of the manual.
- Persons under the influence of alcohol or drugs must not operating, or servicing the product.
- Any faults arising should be reported immediately. In case of anomalies that may affect the safety, the product must not be used until the fault is cleared.
- During use and maintenance, keep away unauthorized access.
- In the case where the printing system is installed on board of a conveyor belt or an automatic machine, not to operate the printing system without the safety devices and any protective covers; bypass is prohibited components relevant to for safety purposes.
- During operation and maintenance wear personal protective equipment provided on the installation and follow all safety instructions according to the regulations. Make sure you understand the signs in the system where you installed the printing system.

1.4 WARRANTY

1.4.1 WARRANTY PERIOD

The printing system is warranted to be free from manufacturing defects under the conditions described in the following paragraph, for a period of 12 months from the date of purchase, which must be substantiated by the documents of sale and transport.

The guarantee is at plants Lesepeidado S.r.l. The materials Lesepeidado S.r.l. are warranted to be free from defects in material workmanship. The company Lesepeidado S.r.l. cannot be held responsible for the misuse of its products (printing methods, inks not by Lesepeidado, other processes, etc..) or any other indirect expenses resulting from their use. The buyer is required to use the equipment as prescribed in this manual.

Lesepeidado S.r.l. cannot be held responsible for:

- Loss or damage to goods occurring during transport;
- Damage or defects in the goods caused by any act, neglect or default on the part of the Customer or third parties;
- Damage resulting from defects in the goods caused by defects in materials or workmanship, if not objected in writing within 8 days after delivery of the goods.

The replacement of defective material during the first twelve months from the date of purchase of the machine will be borne by Lesepeidado Srl except for damage or otherwise not dependent on manufacturing defects.

The warranty excludes consumable parts such as print heads, cartridges, ink, wiper, dump trucks, pipes, pumps and caps.

If the warranty is done at the customer site, Lesepeidado Srl reserves the right to send the first of 'action for a quotation, which shall be countersigned for acceptance for travel expenses.

1.4.2 RESPONSIBILITY

The total liability of Lesepeidado S.r.l. cannot, in any case, exceed the value of the defective, damaged or not delivered goods, calculated on the basis of the prices charged on the invoice. Lesepeidado S.r.l. cannot be held liable for damages of any kind arising from failure to fulfill its obligations due to force majeure (strikes, accidents, disasters, etc ...). In such cases, the Buyer shall not be entitled to any compensation.

1.4.3 LOSS OF WARRANTY

In the event of one or more of the following:

- Works, openings, inspections, modifications of any kind (electrical, mechanical, hydraulic, pneumatic, etc..) To the printing system is not authorized in writing by Lesepeidado
- Use the printing system other than the intended purpose of use
- Use of unsuitable materials and inks and cleaning fluids are not original Lesepeidado
- Use the printing system in contrast with what is reported by the operating and maintenance
- Insufficient monitoring of parts subject to wear
- damage as a result of voluntary and involuntary maintenance of machinery and equipment located in the vicinity of the product

- operation of the printing system with safety systems of the plant failures or not properly applied or not working

Lesepidado S.R.L. assumes no liability for tangible and intangible assets to persons and / or property, the warranty becomes void immediately and certifications / declarations of conformity are no longer valid.

1.4.4 JURISDICTION

Any dispute will be referred to the Court of Bologna (Italy). The terms shall be construed expressly accepted without reservation, in accordance with art. 1341 of the Italian Civil Code.

2 INSTRUCTIONS FOR USE

2.1 PREVENTION OF MISUSE REASONABLY EXPECTED

- Do not place any object on the printer, especially while it is operating;
- Do not remove the power supply and do not turn off or unplug the printer while it is printing or while a computer is configuring the printer or sending files
- To turn on and turn off the printer using the power switch;
- Disconnect the cables always taking them from the body of the connectors, never pulling the strings
- Do not force the print media not in accordance with the provisions of the normal operation of the printer;
- Do not use media other than those specified;
- Do not expose to electromagnetic fields of high intensity;
- Do not expose to temperatures and / or humidity outside the allowable range;
- Do not subject to vibration and / or mechanical shock outside the allowed range;
- Do not spill liquid on the printer and / or handling system of the media;
- Inspection and repair should be performed by trained personnel as recommended by Lesepidado - tampering, improper use, repairs and / or action taken by anyone not authorized by Lesepidado void the warranty

2.2 CAUTIONS ON USING THE MANUAL

This Operation and Maintenance Manual provides basic information for using the printer's sweet. Describes how to remove the printer from the box, select and load print media, install the RIP printing (optional) on your computer and choose the software settings for the best printing results.

This manual has been prepared in accordance with the recommendations given in IEC 62079-2001.

The Operation and Maintenance Manual is an integral part of the product and must be retained for in excellent condition and made It available.

A copy should be stored in a place protected from all agents that can damage and accessible for easy reference.

Lesepidado implements a policy of continuous development and improvement. Lesepidado reserves the right to make changes and improvements to this manual and / or product specifications without notice.

Therefore, the contents of this manual and specifications of the product described herein are subject to change without notice and without obligation.

Reproduction, transfer, distribution or storage of part or all of the contents of this document in any form is prohibited unless prior written approval from Lesepidado.

2.2.1 READ THIS FIRST

The safety instructions are intended to prevent injury and damage to both the product and the environment. All operators are required to read and constantly observe these safety instructions.

2.2.2 DISCLAIMER

The company Lesepidado Srl assumes no responsibility

- for any personal injury and property damage, environmental and / or operating arising from incomplete or non-compliance with operating and maintenance instructions
- if you are experiencing personal injury, property damage and / or faults caused by misuse of the products and / or aftermarket parts and / or different from those recommended in the specific operating and maintenance or Lesepidado.

2.2.3 IMPORTANCE OF THE TEST REPORT

In the last pages of this manual you can find the test form. It must be printed in duplicate and signed by the customer the Lesepidado technician who installed the printing system.

A copy of the minutes shall be kept by the customer for future reference, the other copy shall be kept by the Lesepidado technician.

The signing of the report states that the system has been properly positioned, installed and functioning according to the specifications agreed upon.

The report also certifies that the Lesepidado technician delivered to the customer this manual and that he presented and explained to the client the content, with particular attention to safety standards and procedures for use and maintenance.

3 PREPARING THE PRINTING SYSTEM

The installation can only be performed by Lesepidado trained personnel or by personnel expressly authorized in writing by Lesepidado.

3.1 PREPARATION OF THE LOCATION

This printing system must be placed in a dedicated environment, air-conditioned throughout the year between 18 ° C and 25 ° C, with relative humidity controlled between 30% and 60%, non-condensing, away from direct sunlight sun, dust and dirt, vibration-free, protected from mechanical impact and / or shock.

Daily, accurate maintenance must be performed on this printing system, using the appropriate accessories and detergents / cleaning.

3.2 INSTALLING THE PRINTER

3.2.1 UNPACKING

Open the box with the printer. With the help of a person gently remove the printer from the box, following the instructions on the sheet placed on the printer.



REMOVE THE PRINTER FROM THE BOX AS SHOWN IN THE PICTURE BELOW.

RIMUOVERE LA STAMPANTE DALLA SCATOLA COME MOSTRATO NELLA FIGURA.


DÉPLACER L'IMPRIMANTE DE LA BOÎTE COMME INDIQUÉ DANS L'IMAGE CI-DESSOUS.

REMOVER LA IMPRESORA DE LA CAJA COMO ESTA INDICADO EN EL DIBUJO SIGUIENTE.



3.2.2 LEVELING


Place the printer on a flat, smooth and level surface with the help of leveling kit. In the event that the printer is not horizontal, adjust the height by screwing / unscrewing the 4 feet below it.

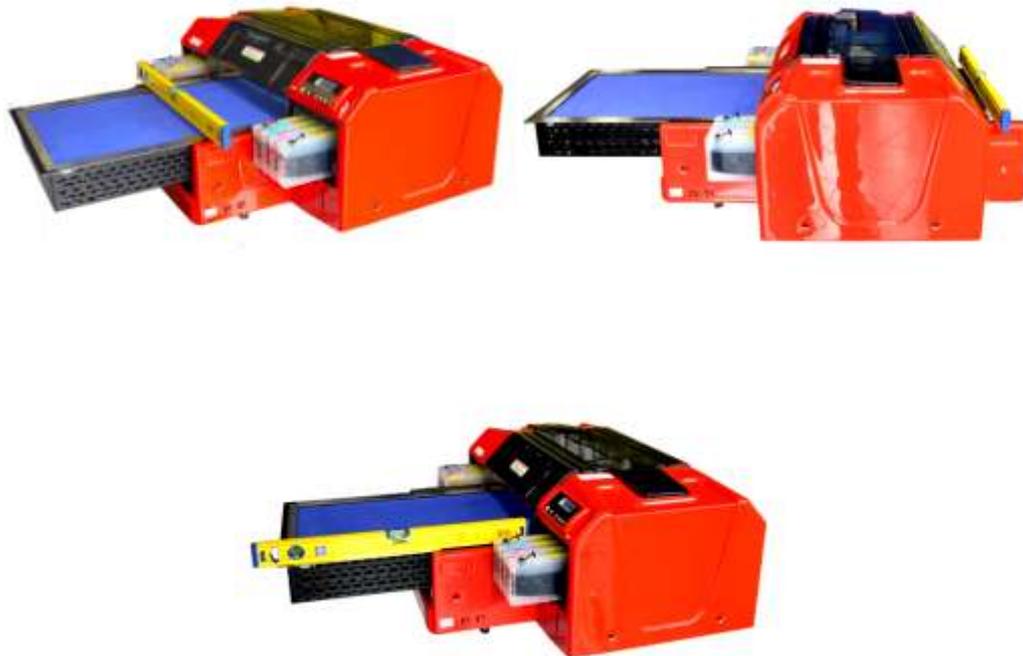

KEEP THE PRINTER BOX AND ALL THE OUTFIT INSIDE THE BOX FOR FUTURE TRANSPORT.

3.2.3 REMOVING THE HEAD CART MOUNTING BLOCK


Open the top cover of the printer and remove the two screws and the mounting cart block.

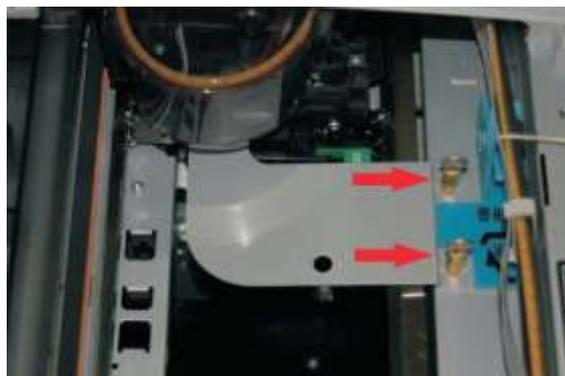

KEEP THE CART BLOCK IN A SAFE PLACE FOR FUTURE USE.

Unlock the print head by pulling the green tab to the left.

DO NOT REMOVE THE TAB.

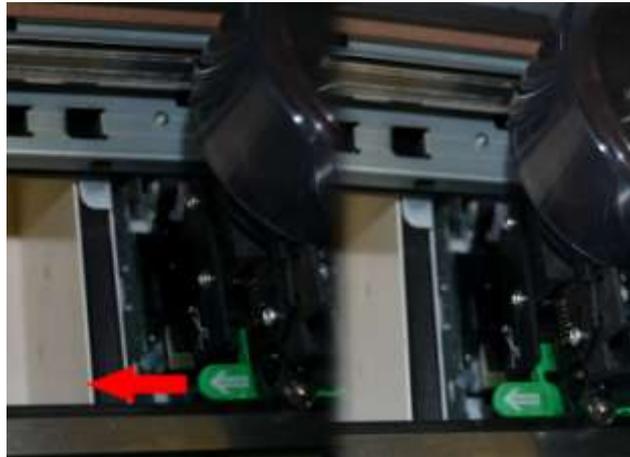

WARNING !

DO NOT PUSH DOWN THE GREEN TAB, IT COULD BREAK.

3.2.4 ELECTRICAL CONNECTION

Ensure that prior to any work, all the preventive measures are put in place in order to operate safely and to prevent any damage to persons and property.

Dangerous electrical voltage:

Perform electrical work only by qualified personnel. Unauthorized personnel should not be allowed to work on electrical parts.

Perform work on the electrical system only when the power is switched off.

Before starting to work, switch off the main switch, remove the cable from the wall outlet and put in safety against inadvertent reactivation or pull the plug from the socket. Apply relevant warning signs. After switching off, before starting work on electrical equipment, make sure that the control box or system controls are not live. Even after turning off the main switch in the field of network may possibly still be dangerous voltages for life.

After the intervention, connect the power cord into the back of the printer and press the power buttons to turn on the printer.



3.2.5 CARTRIDGES INSTALLATION

Screw the lever extension on the Cartridge Left Lever with the help of a screwdriver.



Remove each ink cartridge from its packaging. Lift both ink levers.



NOTE:

THE FIRST TIME YOU INSTALL THE INK CARTRIDGES, PRINTER USES SOME INK TO CHARGE THE PRINTING SYSTEM. THUS, THE DURATION PERFORMANCE MAY BE LESS FOR THE FIRST REFILL CARTRIDGES. THE FOLLOWING INK REFILL WILL LAST FOR THE NOMINAL DURATION.

Install the ink cartridges in the printer. Hold each cartridge to the filling hole to the outside of the printer, then insert it into the slot. Be sure to insert each cartridge into the correct slot. After reloading cartridges, push down both levers.



Fill each cartridge with the correct ink using a funnel.

WARNING !

CLEAN THE FUNNEL WITH SUITABLE CLEANING SOLUTION BEFORE USING A DIFFERENT COLOR INK.

3.2.6 ENTERING THE TRAY

Place the tray at the front of the printer and push inward until the LEDs located on the front of the printer are on.



Then press the red button to move the tray to the position of Ready.



On the printer, this message will be displayed: NON-GENUINE CARTRIDGE.

Use the down arrow to navigate through the message that appears, select YES with the LEFT arrow key, repeat the process for the second message.



If the printer displays INK LOW or REPLACE CRT refer to chapter HOW TO RESET CARTRIDGE AND MAINTENANCE TANK at page 52.

The printer will ask for confirmation to start charging the ink delivery system.

NOTE:

IF THE PRINTER DOES NOT ASK TO PROCEED WITH THE LOADING AUTOMATIC INK, ENTER INTO THE MENU "MAINTENANCE" FROM THE CONTROL PANEL AND PERFORM TWO "EXTRA CLEANING".

After approximately 2 minutes a message will appear on the panel about the ink levers. Follow the instructions to raise or lower them.

WARNING!

THE PROCEDURE FOR LOADING TAKE ABOUT 8 MINUTES. DO NOT TURN OFF THE PRINTER, OPEN THE COVER, REMOVE THE INK CARTRIDGES OR THE MAINTENANCE TANK, DURING THIS PERIOD OR WHILE THE PAUSE BUTTON FLASHES, BECAUSE IT CAN CAUSE DAMAGE TO THE PRINTER.

When the word "READY" appears on the LCD the charging process is complete.



NOTE:

**THE PRINTER MUST BE SET WITH THE PRINTER SETTINGS  ROLL AND SCISSORS (AS SHOWN IN FIGURE ABOVE).
PRESS "ARROW LEFT <- BUTTON" TO SELECT THE CORRECT SETTING.**

3.3 INSTALLATION OF SOFTWARE

WARNING !

IF YOU PURCHASED THE SOFTWARE "IRIDE RIP" DO NOT INSTALL THE WINDOWS DRIVER AND GO TO PAGE. 33. DO NOT CONNECT THE USB CABLE UNTIL IT IS REQUIRED.

3.3.1 INSTALLING WINDOWS PRINTER DRIVER

Make sure the computer and printer are turned on and that the printer is not connected to the computer.

Insert the CD-ROM DolciSSima's driver on your computer. If the autoexec does not work, select the path to the CD-ROM drive and double-click on "EPSetup.exe."

Click Install.

When it is required, connect the printer to the computer. Wait until the printer is recognized by the system.




Follow the instructions on the screen.


Click on END and remove the CD.

3.3.2 SETTING THE WINDOWS PRINTER DRIVER


Select "Premium Luster Photo Paper (260)" in support settings and "Roll Paper" and "User Defined" in paper settings.

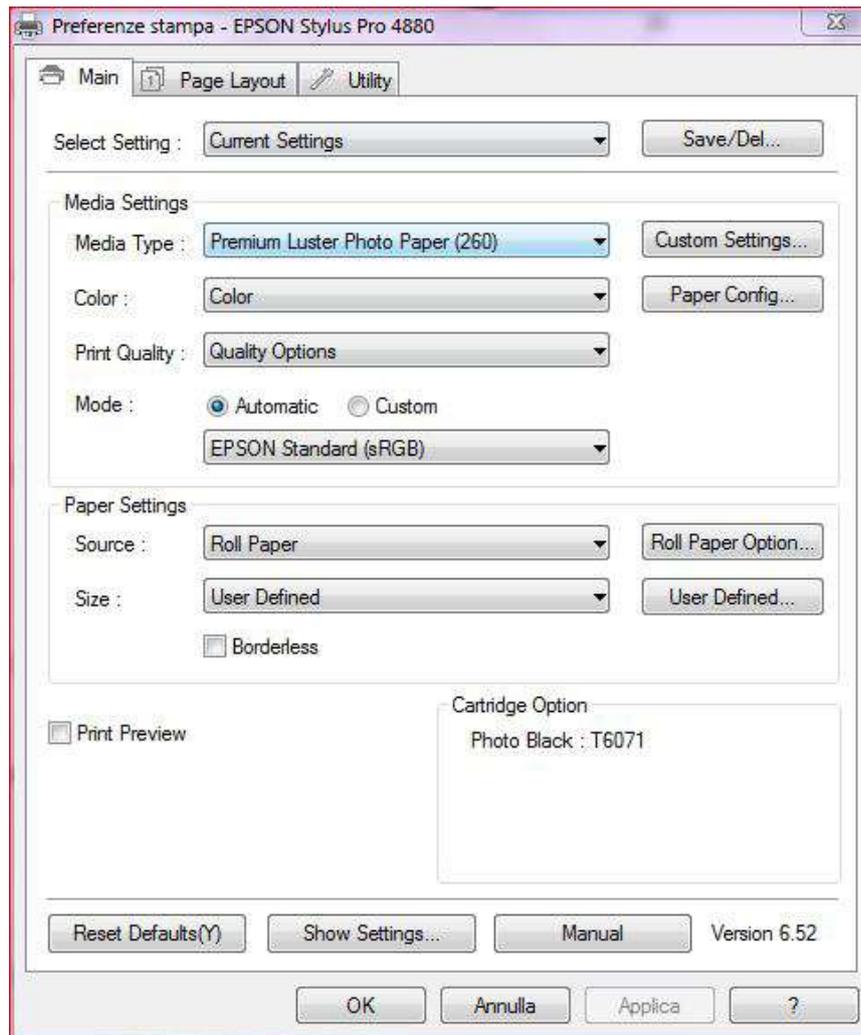

Click on Roll Paper Options and set "Auto Cut: Off"

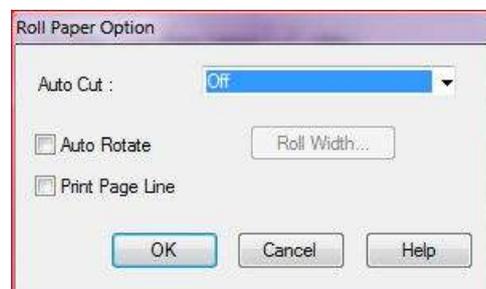

Set the size in "User Defined Paper Size" as shown in the image below.

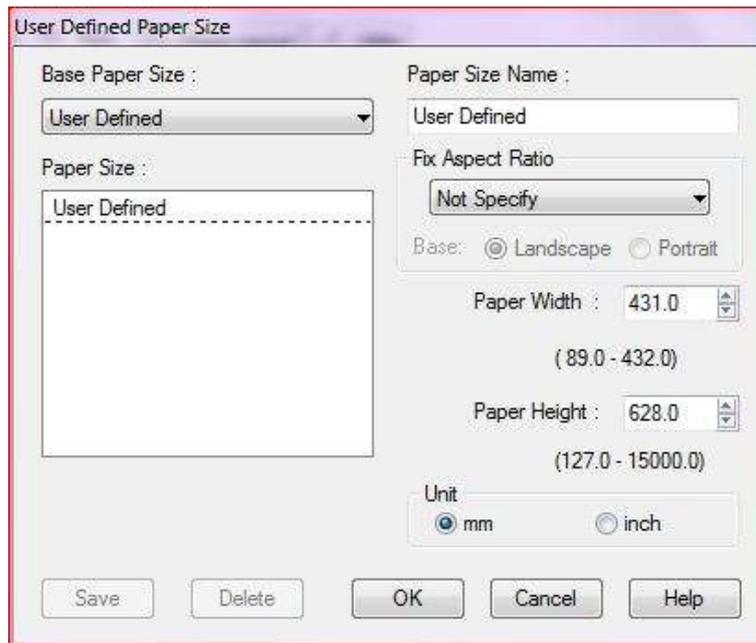


Note:

The dimensions of paper width and height will be the same that must be used to create a new layout in the software used for printing.

3.4 INSTALLING THE RIP PRINTER (OPTIONAL)

Insert the RIP key in a computer's USB port.

Browse to the location of the key and double-click "setup.exe"

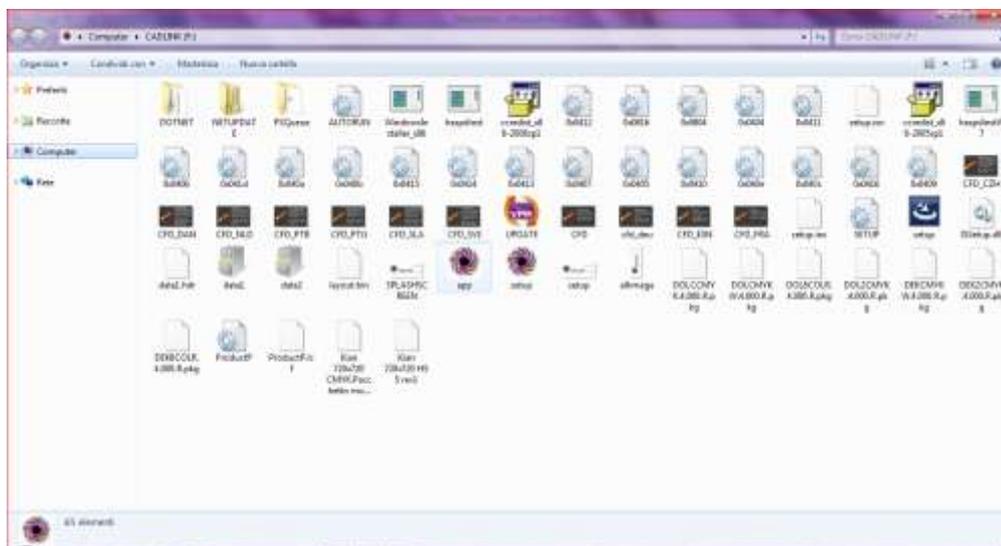

Select your language.



Click on “Continue”.



Read the Licence Agreement and click on “Continue” to accept the conditions.



Select “Full Installation” and click on “Next”.



Click on “Continue” to install IRIDE in the default folder, click on “Change” if you want to select a different folder. Then click on “Continue”.



Click "Next" to create a DolciSSima RIP program folder



Click "Finish" to exit the installation wizard program

4 FIRST START

4.1 PRINTING WITH WINDOWS DRIVER


The printer DolciSSima is seen by the operating system as a regular printer. From the graphics program used, set DolciSSima as the output device.

4.2 SETTING UP A PRINTING QUEUE IN IRIDE

The first time you run the program you will see the window of the initial configurations.

Set up:


- Display unit: centimeters
- Number of decimal zones: 2

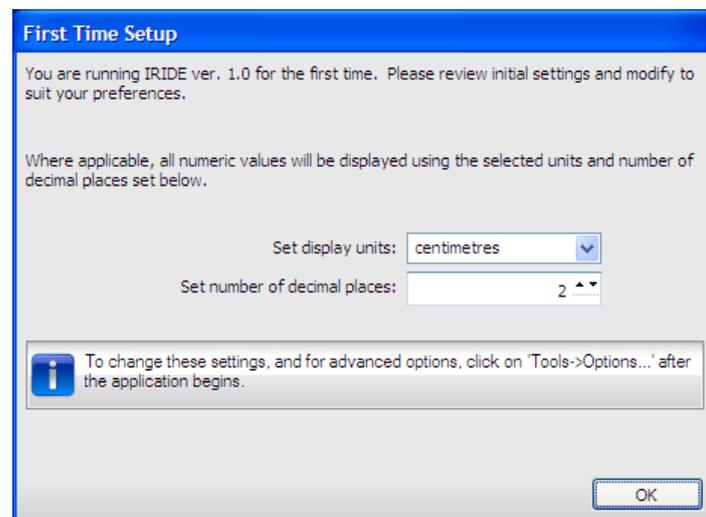

Click "OK"




Click on "Next"

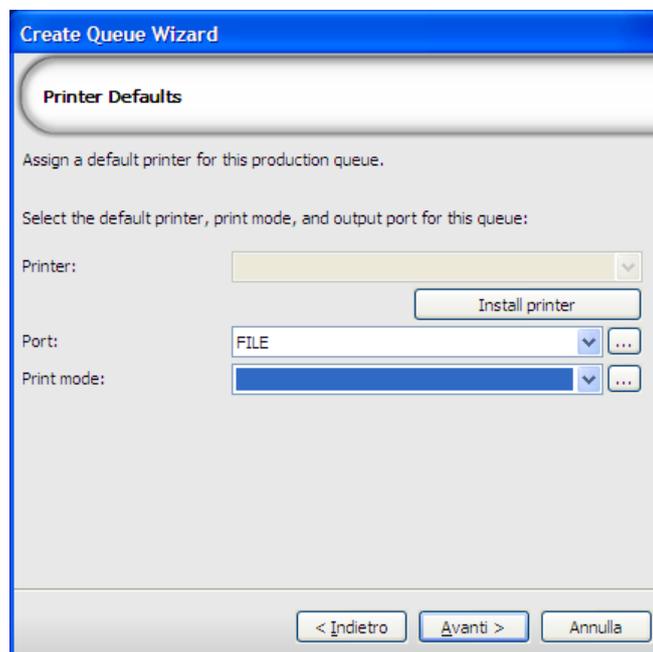


Click on "Install Printer "

In the window "Install Printer", select "DolciSSima 8color" and click "OK"

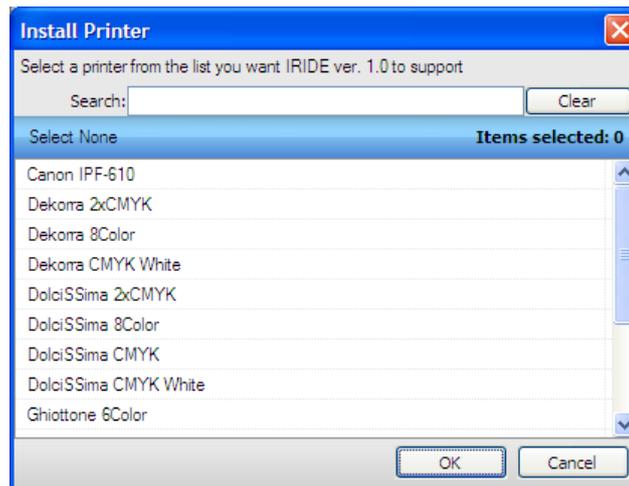


In the Printer Setup screen select "Search for new printer package versions from DVD or network" and click "Next"


If your computer is not connected to the Internet, select "Do not search automatically, I choose the search path", click "Browse" and select the folder that contains the file. Pkg (eg DOL8COLR.4.202.R.pkg).

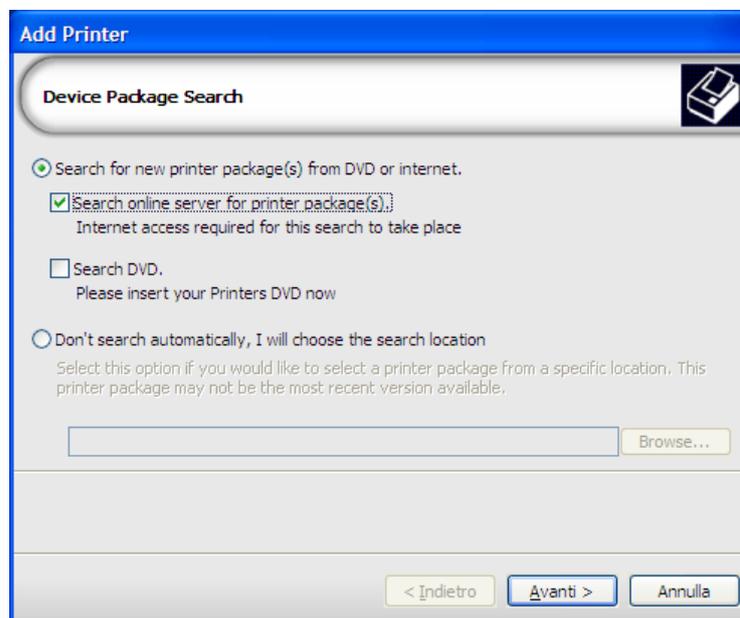

When the package of the device will be completely installed click "Next".

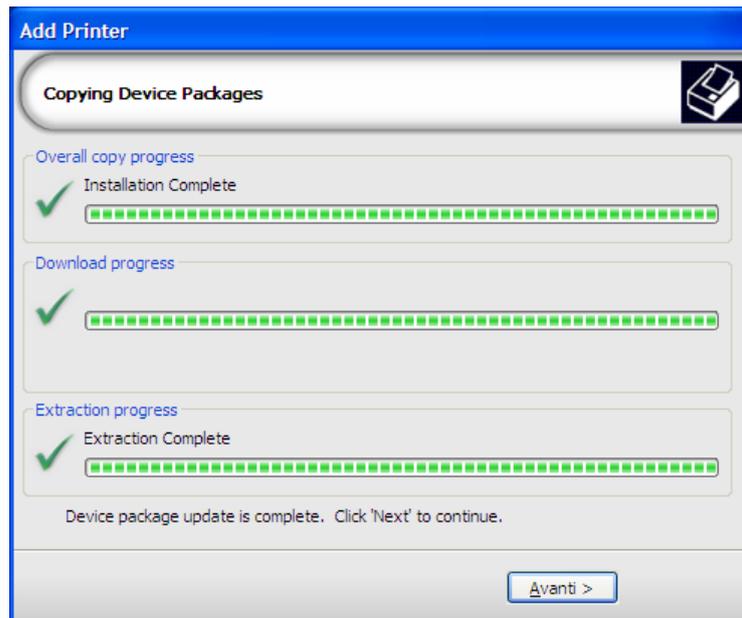



In the following summary screen installation click "Finish" to complete the installation procedure of the printer .

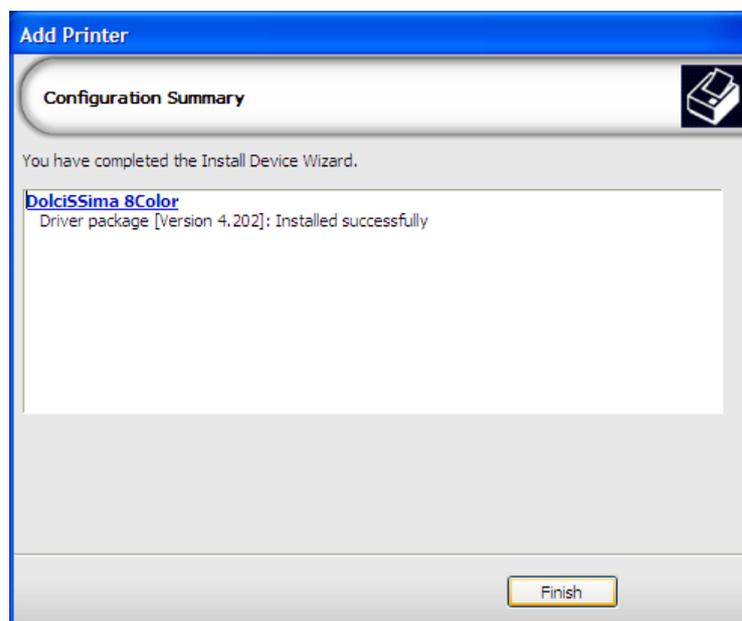

In the "Create Queue Wizard" select:

- Printer: DolciSSima 8color
- Port EpsonStylus Pro 4880 + USB00X
- Printing mode: DolciSSima 8col 720x720 azo v2

Then click on "Next"

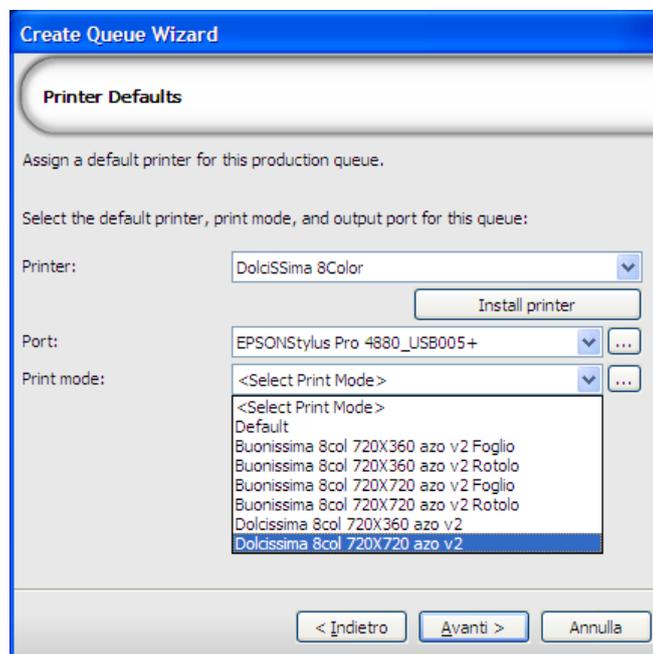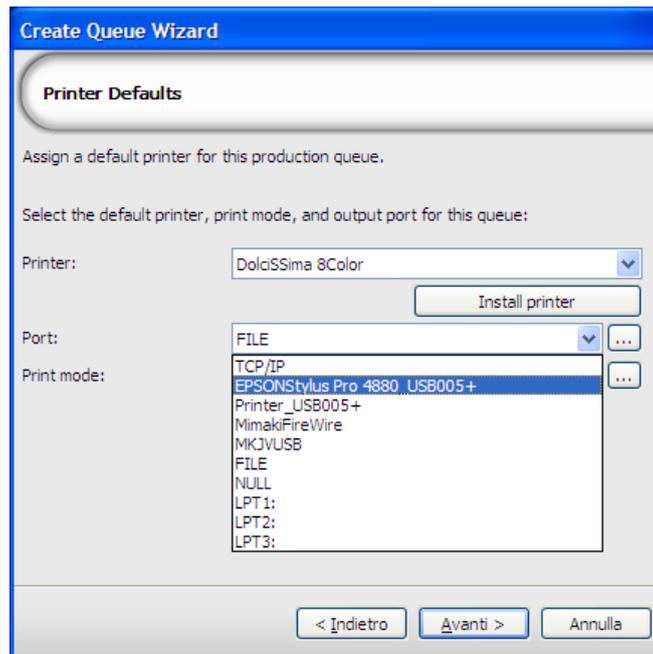


In the name of the production queue write "DolciSima" and click "Next".




In the setup screen support select:


- Type: Template Media
- Size: Standard Board

And click "Next"

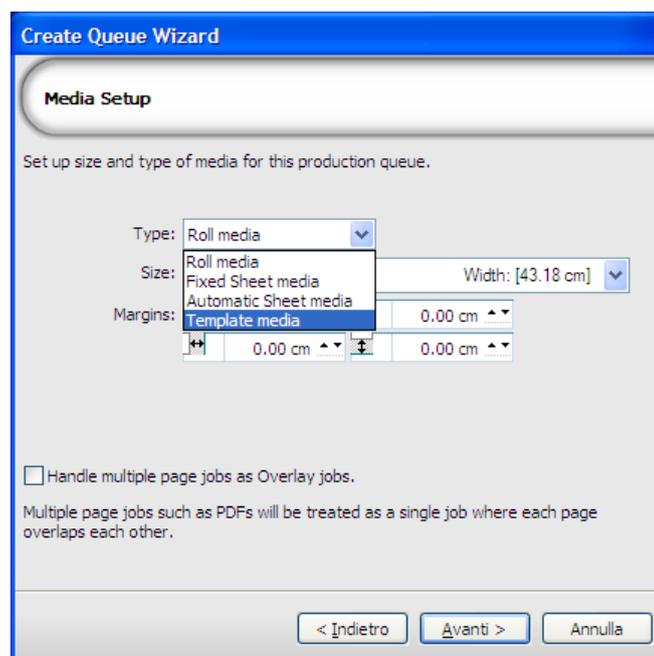


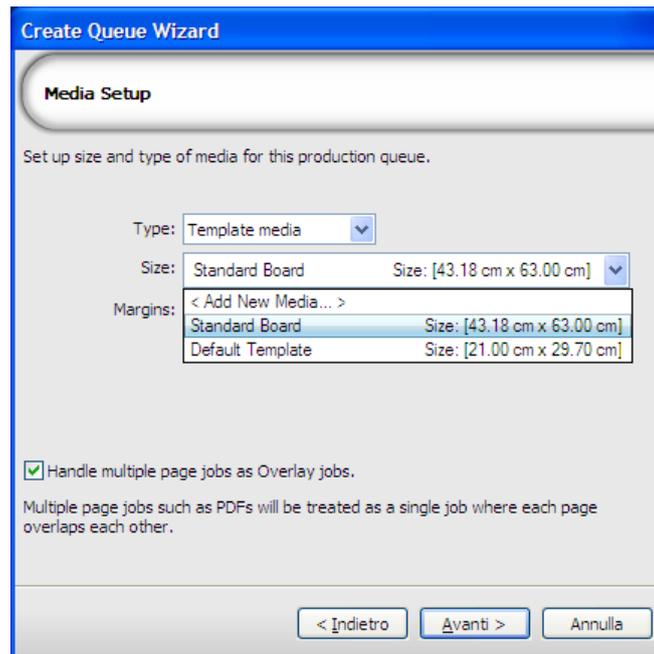

In the layout mode window click "Next"

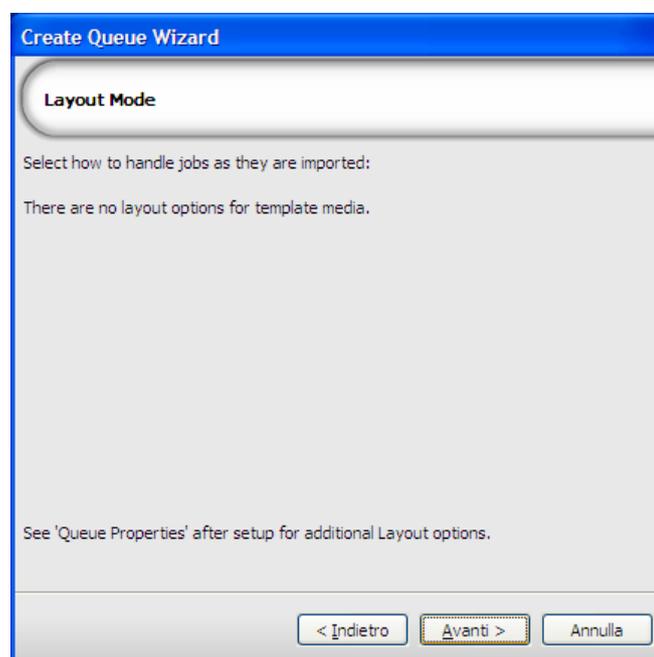


In the Options Running screen, select Keep and then click "Finish".

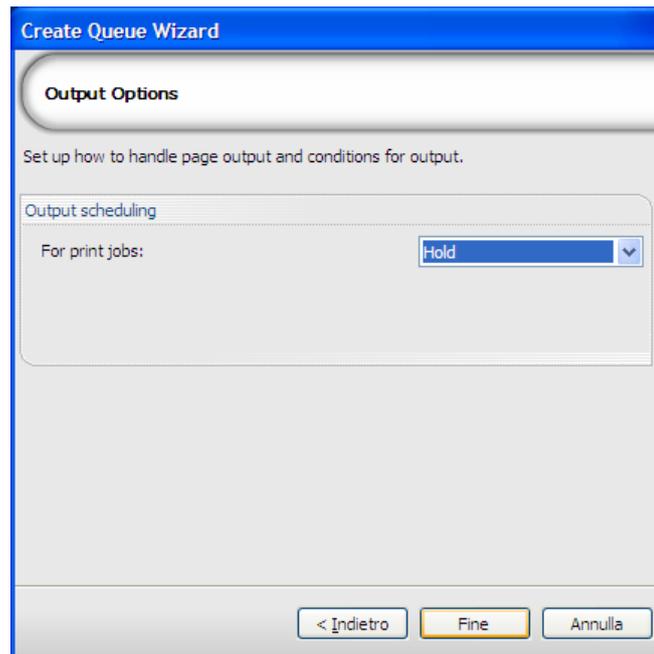


The program will open automatically


Click the first icon on the left

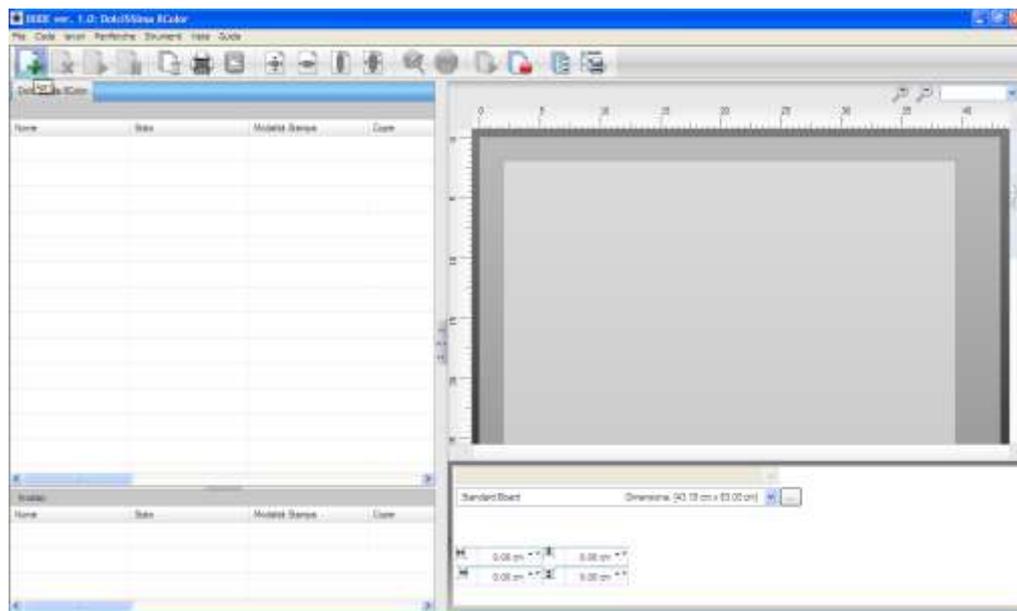


Search and select the file you want to print, click "Open"

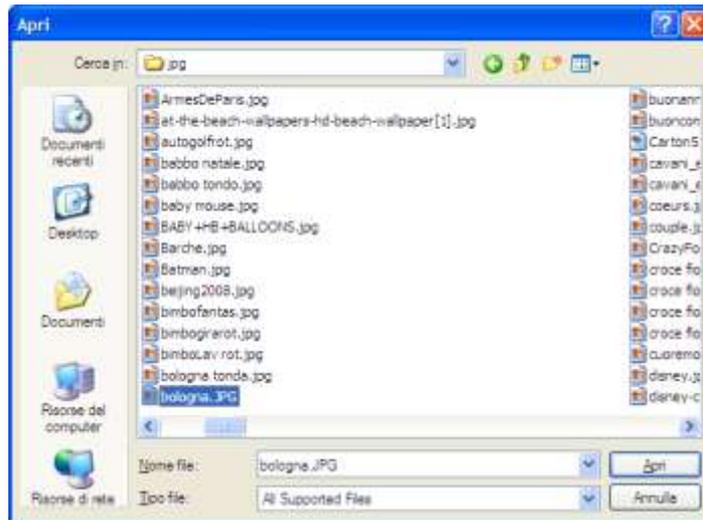


Click "OK"

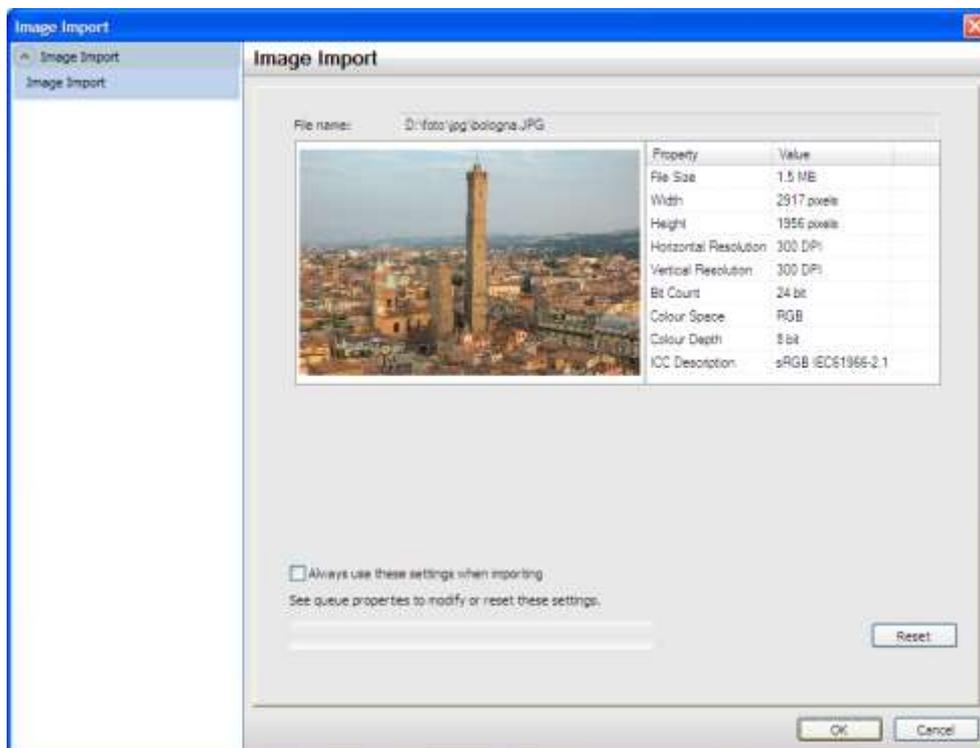

Click "Express"

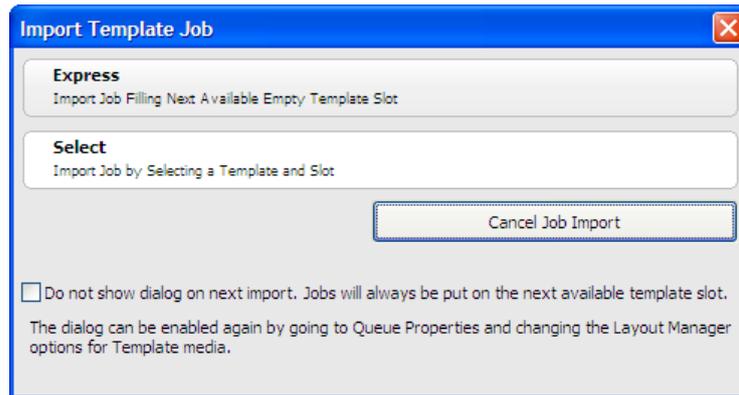

Move the image to the desired position and resize if necessary.

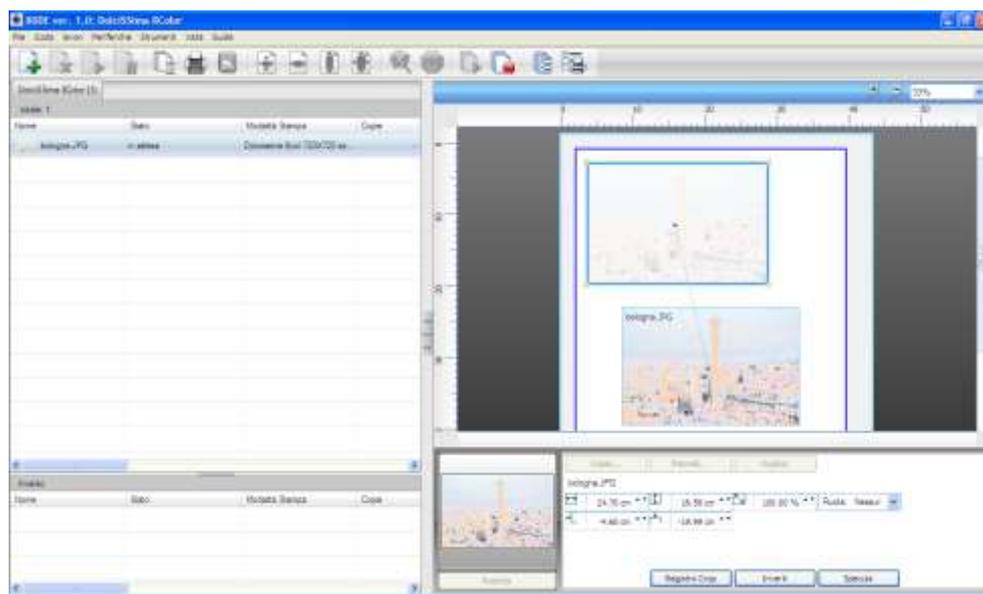

Click on the icon "Printer"



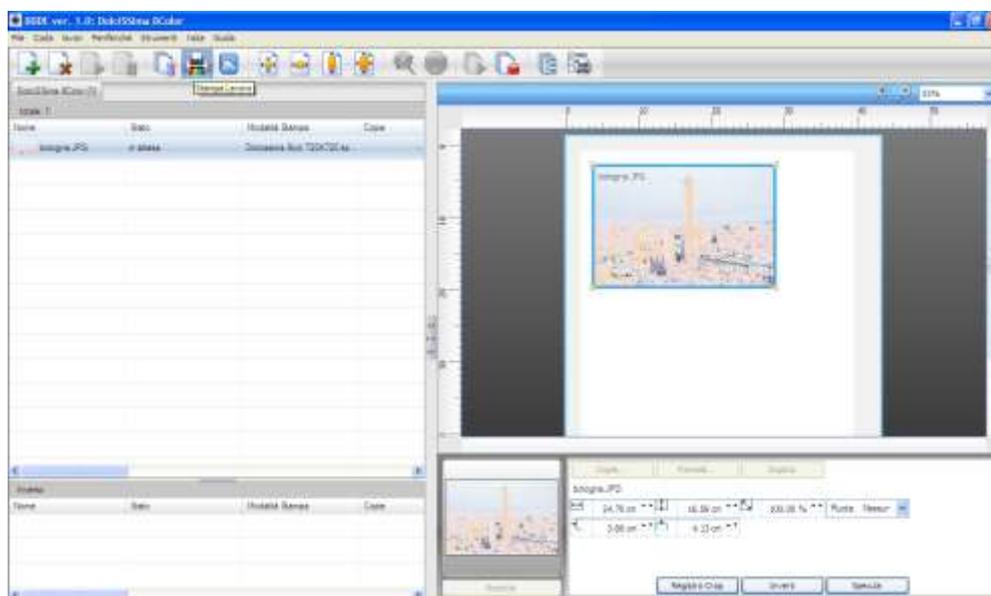



Image processing (ripping)

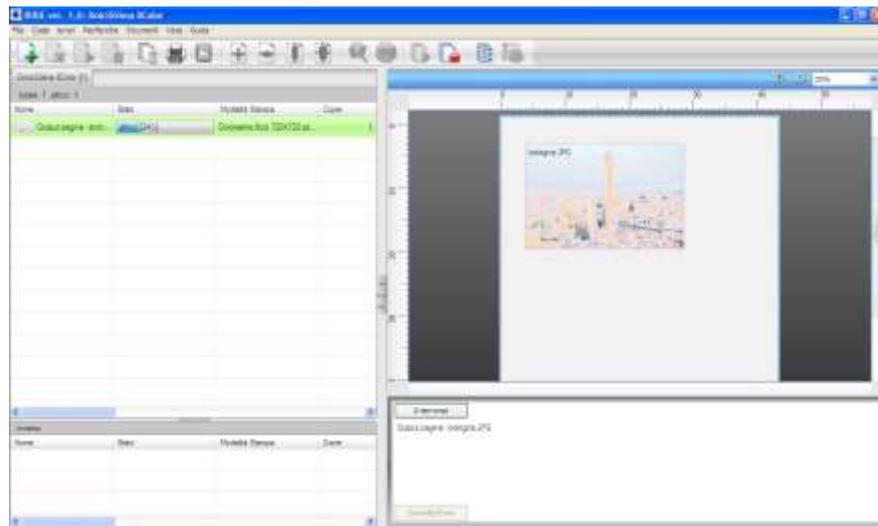

Performing Printing

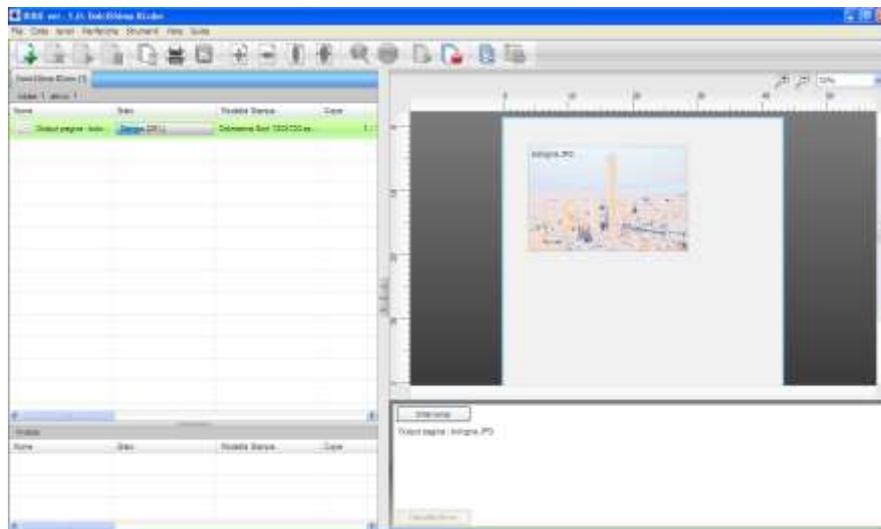


The prints made move at the bottom creating a printing history

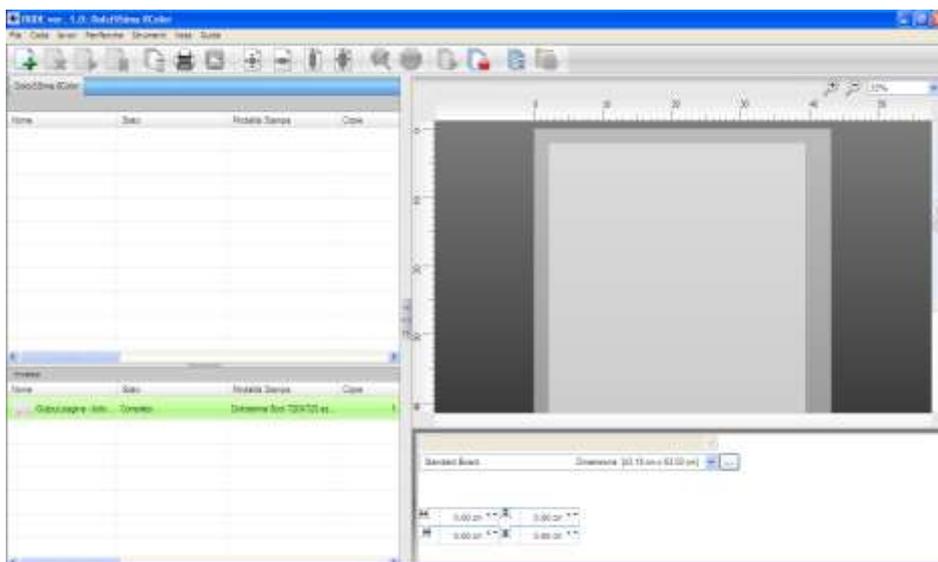


4.3 LOAD A PRODUCT TO PRINT

Remove the Food Box from the printer while pressing the RED button, and then place it on a flat, level surface.

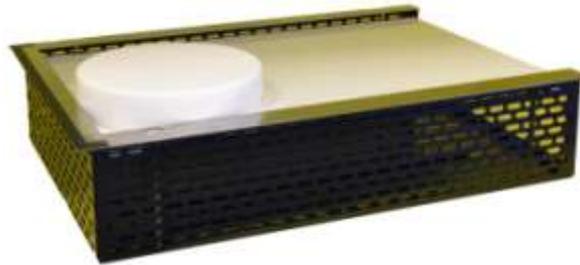

Use the screwdriver to adjust the height of the floor according to the thickness of the product. Place the product on the floor and verify that the maximum height of the product is at the same level of the metal frame. Use the spirit level supplied with to help with the measurement.

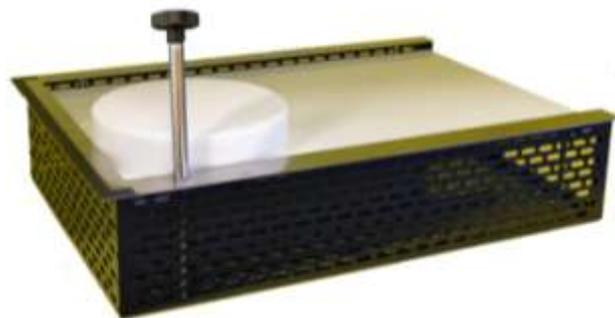

Place the Food Box at the front of the printer until the LEDS switch on, then press the red button to automatically place the tray into the ready position.

4.4 CONTROLS DURING OPERATION

Pay attention to the control of ink levels. Verify at regular intervals that are not lit or warning signals indicating the exhaustion of one or more inks.

WARNING:

THE ENTRY OF AIR INSIDE THE HYDRAULIC CIRCUIT OF THE INKS MAY AFFECT THE PRINT QUALITY AND DAMAGE THE PRINTING SYSTEM.

4.5 WARNINGS AND LIMITATIONS OF THE PRINTING SYSTEM

End of ink warnings.

The printer makes an estimate of the consumption of ink into the cartridges, based on calculations based on the printing mode and on the type of media used.

On the basis of this estimate the printer alert the user that the ink is running low. Depending on the different ways to use the printer, it may happen that the estimated consumption and the real one differ, so the alert is earlier or later than the actual amount of ink remaining in the cartridge.

We strongly recommend you to periodically check the amount of ink inside the cartridges, and replace empty ones, independently of the indication of the printer.

In the case the actual consumption of ink is higher than the estimated, and the ink of one or more cartridges runs out without the printer gives a warning, stop immediately to print, and replace the cartridge with a new one, or fill tanks.

After loading or filling of a new cartridge, especially if the ink cartridge before was completely depleted, it may take a few cycles of head cleaning to recharge the ink in the hydraulic circuit.

4.6 PRINTING SYSTEM STOP

4.6.1 SWITCH OFF

To make you turn off the printer, remove the tray from the printer and press the power button located on the front of the printer (see picture) and wait until it switches off the control panel.



WARNING!

SWITCHING OFF THE PRINTER BY THE FRONTAL POWER BUTTON ONLY TURNS OFF THE PRINTER BAR. THE PART OF MECHANICAL HANDLING AND ELECTRONIC THAT COMMAND THE SHIFT TRAY WILL REMAIN ILLUMINATED AND LIVE. FOR THE COMPLETE TURN OFF OF THE PRINTER, PRESS THE POWER BUTTON LOCATED BELOW THE PRINTER.



4.6.2 PREPARING TO STOP SYSTEM

Before you turn off the printer, make sure that the control panel **is not** showing the message "PAPER OUT". Remove the tray from the printer and place it on a smooth, flat surface, in order to avoid mechanical shocks or damages.

WARNING!

**IF THE PRINTER IS TURNED OFF WITH THE MESSAGE OF "OUT OF PAPER" DISPLAYED ON THE CONTROL PANEL, WHEN IT WILL BE TURNED BACK ON THE PRINTER WILL MOVE THE BELTS EJECTING THE DRAWER
IN ORDER TO AVOID ANY PERSONAL INJURY OR MATERIAL DAMAGE, REMOVE THE DRAWER BEFORE YOU SWITCH ON THE PRINTER**

4.6.3 EMERGENCY STOP

If you wish to proceed with the emergency stop of the printer, unplug the power cord from the electrical outlet.

WARNING !

IF YOU WANT TO PROCEED WITH THE EMERGENCY STOP OF THE PRINTER, REMOVE THE BOX BEFORE PROCEEDING WITH THE RESTART.

5 MAINTENANCE

Following these simple steps daily, will ensure that your printer lasts longer and will help you to achieve optimal performances with little-to-no down time from your DolciSSima printer.

5.1 DAILY ROUTINE

- Perform nozzle checks and head cleaning at the beginning of the day.
- To ensure top performances, perform nozzle checks regularly throughout the day (the amount of ink consumed is negligible). If you notice more than a 10% of nozzle dropouts in any of the nozzles in each of the color channels, perform a head cleaning operation.
- Inject a few drops of flushing or cleaning solution into the capping station and spit cups every day at the end of the shift before "parking" the print heads for the night.

5.2 PERIODIC MAINTENANCE

- Clean the capping station and wiper blade. Take a foam swab moist with cleaning solution and clean around the capping station and wiper blade daily to remove any ink build up that can be deposited onto the print head. Removing ink build-up will help ensure smooth, uninterrupted printing.
- Clean the encoder strip. Moisten a swab with water and gently wipe the encoder strip to remove any ink residue.


5.3 HOW TO RESET CARTRIDGES AND MAINTENANCE TANK

If the “INK LOW, REPLACE CRT”, “SET INK CRT” or “MNT TNK NEAR TO FULL” messages are displayed on the printer panel, you need to reset them.



Remove cartridges/maintenance tank from their slot.

Take the Chip Resetter Device and lay the 7 pins of the device on the 7 contacts of the chip placed on the cartridge/maintenance tank. The RED LIGHT of the device starts to flash till it turn from RED to GREEN.

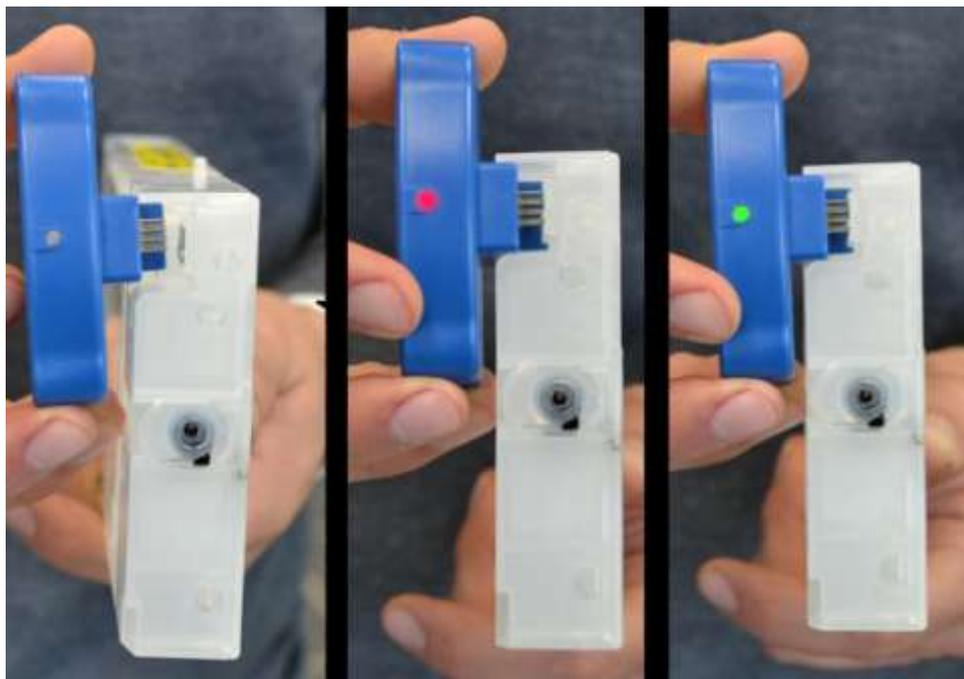

Now the chip is resetted.

Note:

If the RED light on the device doesn't turn green try again the procedure. If after several attempts the light still remain RED the chip needs to be replaced.

Caution:

During the resetting procedure do not move the Chip Resetter pins on the contact or you can damage the chip. Be sure that you lay down the pins in the right way.

5.4 HOW TO PERFORM A NOZZLE CHECK

If you find that your printed image is unexpectedly faint or dots in your printed image are missing, you may be able to identify the problem using the Nozzle Check procedure.

Note:

Do not start the Nozzle Check procedure while printing is in progress; otherwise, your printout may be marred.

Make sure that the Food Box is inside the printer and the printer is in READY status

Press > Menu to enter the printer's menu system.



Press \vee to highlight TEST PRINT, then press > Menu. To enter in NOZZLE CHECK menu.



Press > Menu to display PRINT.



Press > Menu again to start printing a nozzle check pattern.

After the nozzle check pattern is printed, the printer goes to PAPER NOT CUT state.



Press the RED button to move the FOOD BOX out of the printer.

Nozzle check pattern examples:

Good



```

Version          :F02077-1.00.8000
MaintenanceTank : Left 100%  Center 100%  Right  72%
Cur.InkCount   : 502.8ml   Pre.InkCount  : 0.0ml       C-P: 502.8ml
Cur.PaperCount : 436.1cm   Pre.PaperCount: 0.0cm       C-P: 436.1cm
    
```

No Good



```
Version      :F02077-1.00.8000
MaintenanceTank : Left 100% Center 100% Right 72%
Cur.InkCount  : 502.8ml Pre.InkCount : 0.0ml C-P: 502.8ml
Cur.PaperCount: 436.1cm Pre.PaperCount: 0.0cm C-P: 436.1cm
```

If you find that any dots are missing or deflected from the test lines in the pattern, you need to clean the print head as described in the following chapter.

5.5 HOW TO CLEAN THE PRINT HEAD

There are 2 different kinds of Cleaning:

- Soft Cleaning
- Power Cleaning

5.5.1 SOFT CLEANING

This cleaning procedure must to be used if you find that only a few dots are missing or deflected from the test lines in the pattern.

Press the > **Menu** button for more than 3 seconds



Soft Cleaning procedure takes about 2 minutes.

If dots are still missing after the Soft Cleaning, try the following:

Repeat this procedure two times, turn the printer off and let it sit for few hours, and then try head cleaning again.

If dots are still missing select POWER CLEANING from the control panel on the printer. See "POWER CLEANING" procedure here below.

5.5.2 POWER CLEANING

You can run a power cleaning cycle from the control panel if the normal cleaning process is not sufficient to clear the nozzles or if you need to fill the pipes with other inks or with cleaning solution. This consumes ink, so use this procedure only if necessary.

Note:

You may need to reset cartridges to run this operation.

Print a nozzle check to make sure the print head need cleaning.
Make sure the printer is in READY status.

Press the > Menu button.



Press the ∨ button till MAINTENANCE, then press > Menu button



Press the \vee button till PWR CLEANING, then press > Menu button two times to start the Cleaning procedure. Follow the instruction to raise or lower the ink levers.



If the print quality does not improve after you perform these procedures for two or three times, please get in contact with Lesepidado support (see the references at the end of this manual).

Precautions before performing maintenance.

When replacing the ink with cleaning fluid, make sure that ALL the hydraulic circuit (cartridge or bottle, tube, sub tank, valves, fittings, dampers, filters, cartridges, capping) does not contain more ink, running the required number of cleaning procedures until the liquid leaking from the head is clean and clear.

6 IMPORTANT GENERAL WARNINGS

6.1 STORAGE AND OPERATING CONDITIONS

- Always use the included printer cover to cover the machine from dust and debris.
- Do not store your DolciSSima printer or the DolciSSima inks in an environment with a temperature over **25° C** or under **15° C**.
- Do not operate with your DolciSSima printer or the DolciSSima inks in an environment with a temperature over **25° C** or under **18° C**.
- Only use your DolciSSima printer on a level surface free of vibrations.
- Do not store or use your DolciSSima printer or DolciSSima inks in direct sunlight.

6.2 IN CASE OF DOWNTIME

FOR ALL TYPES OF INK

THE NON-USE OF THE PRINTING SYSTEM WITH THE CONSEQUENT PROLONGED PRESENCE OF THE INK IN ITS HYDRAULIC CIRCUITS MAY LEAD TO A DETERIORATION OF THE PRINTING PERFORMANCES OR EVEN TO BLOCK THE PRINTER WITH POSSIBLE DAMAGE.

REGARDLESS OF THE EXPIRATION DATE OF THE INKS, YOU MUST REMOVE THEM FROM THE PRINTING SYSTEM AND REPLACE THEM WITH THE APPROPRIATE CLEANING FLUIDS IN THE EVENT OF DOWNTIME.

6.3 EXPIRATION OF INKS

THE EXPIRATION DATE ON THE BOTTLE REFERS TO THE ORIGINAL PRODUCT, CLOSED, UNUSED AND PROPERLY MAINTAINED ACCORDING TO THE PROCEDURES BELOW.

AFTER OPENING THE BOTTLE, THE INK REMAINING IS VALID FOR 3 MONTHS (IF DOES NOT EXPIRE FOR ITS NATURAL END BEFORE) ONLY IF, WHEN IT IS REMOVED FROM THE PRINTER, IT IS IMMEDIATELY CLOSED IN ITS ORIGINAL CONTAINER AND PROPERLY KEPT IN ACCORDANCE WITH THE INSTRUCTIONS BELOW.

THE INK LOADED ON THE PRINTING SYSTEM EXPIRES AFTER TWO WEEKS IF STORED IN THE PRINTING SYSTEM CONTAINERS FOLLOWING THE INSTRUCTIONS AS DESCRIBED BELOW.

6.4 REMOVAL OF INKS

WHEN REMOVING THE INKS, REPLACE THEM WITH CLEANING SOLUTION

To preserve the functionality of the printing system and maintain the quality of the results, in case of downtime it is necessary to remove the inks from the printer.

The timing depends on many factors including the temperature, the humidity, the amount of air inside the container, exposure to heat sources, or to direct sunlight etc.. etc..

For optimum operation it is recommended to replace the inks with a cleaning fluid and perform a thorough cleaning of the hydraulic circuit of the printing system (cartridges / vials / bottles, pipes, dampers, head etc..) if the outage is over to:

edible ink no azo :	48 hours (week end)
edible ink azo:	one week
inks non-food:	one week
white inks (if any), food and non-food:	immediately after use in systems without recirculation, 48 hours (week ends) systems with recirculation (if left on).

6.5 CONSERVATION OF INKS

WARNING !

WHEN THE INKS ARE LOADED ON THE PRINTING SYSTEM, THE ENVIRONMENT MUST ALWAYS BE MAINTAINED AT A TEMPERATURE BETWEEN 18 ° C AND 25 ° C, BOTH WHEN THE PRINTING SYSTEM IS IN OPERATION, BOTH WHEN THE PRINTING SYSTEM IS TURNED OFF.

WARNING !

IF, IN THE CASE OF PLANT SHUTDOWN, THE INKS ARE REMOVED BY THE PRINTING SYSTEM, THEY MUST BE STORED AT A TEMPERATURE BETWEEN 18 ° C AND 25 ° C, IN CLOSED CONTAINERS SEALED AND STORED IN A COOL, DRY, CLEAN, DARK PLACE, AWAY FROM SOURCES OF HEAT AND DIRECT SUNLIGHT.

WARNING !

IN ADDITION TO THE ABOVE CONDITIONS, SOME TYPES OF INK MUST BE PERIODICALLY OR CONTINUOUSLY AGITATED BY SPECIFIC METHODS. THE USER SHOULD CONSULT THE SPECIFIC INSTRUCTIONS ON THE OUTSIDE OF THE BOTTLE AND FOLLOW THEM SCRUPULOUSLY.

6.6 CARTRIDGES AND BOTTLES MAINTENANCE

WARNING!

IN THE CASE OF USE OF EDIBLE INKS

CARTRIDGES, VIALS AND BOTTLES THAT CAN BE REFILLED STILL NEED TO BE EMPTIED AND WASHED WITH WATER AND, AFTER CLEANING, RINSE WITH A SPECIAL CLEANING FLUID (CLEANING SOLUTION) TWICE A MONTH.

THE CARTRIDGES AND PLASTIC BOTTLES MUST BE REPLACED EVERY SIX MONTHS.

7 SYSTEM REQUIREMENTS

Minimum system requirements

CPU: P4 1.25 GHz

Hard Drive: 20 GB

RAM: 256 MB (2GB for Vista)

USB: 1.1

Operating System: 32 bit Windows XP™, Vista™

Suggested system requirements

CPU: P4 2 GHz (or higher)

Hard Drive: 120 GB

RAM: 1 GB (2GB for Vista)

USB: 2.0

Operating System: 32 bit Windows XP™, Vista™, 7™

8 TROUBLESHOOTING

Problem: The printer continues to display the message "Reload Paper"

Solution: If the tray is inside the printer, please verify that the tray is placed into the correct position. Wipe with a damp cloth the black stripe on the front of the drawer. Check the integrity of the black band.

Problem: The printing quality is optimal on one side but on the other side it is out of focus (also applicable if you notice the same problem on the front and rear of the printer).

Solution: The printer DolciSSima should be placed on a flat, leveled surface to properly print the entire printable area.

Problem: white lines/stripes appear inside the printed area.

Solution: Carry out a nozzle check to verify that the perfect condition of the printhead. If the test result is not optimal, perform a head cleaning.

9 TECHNICAL SUPPORT

You should always contact an authorized dealer of DolciSSima for assistance or for any technical request during normal business hours. If you need further assistance you can contact Lesepidado at the references provided later in this manual.

10 TECHNICAL DATA

BRAND :	LESEPIDADO
MODEL :	DOLCISSIMA 2.0
POWER SUPPLY :	110/220V – 50/60 Hz
MAX. CONSUMPTION :	55W
OPERATING TEMPERATURE :	18°C - 25°C
STORAGE TEMPERATURE :	18°C - 25°C
HUMIDITY :	30% - 60% , NO CONDENSATION
NOISE EMISSION:	<70dB as per UNI EN ISO 9612, measured as per UNI EN ISO 11904-110
DIMENSIONS :	860x890x450mm
WEIGHT :	55 Kg

11 LESEPIDADO REFERENCES

Lesepidado s.r.l.
Via Liguria, 8
40060 Osteria Grande (BO)
ITALIA

Tel. +39 051 19 98 79 62

Fax. +39 051 19 98 79 64

www.lesepidado.it

info@lesepidado.it

P.IVA/C.F. 02028301204

lesepidado **Declaration of Conformity****Lesepidado S.r.l.**

Via Liguria, 8 – 40060 Osteria Grande (BO)
Tel +39 051 19987962 - Fax +39 051 19987964 - CF e PI 02028301204

Declares that the product:**DOLCISSIMA 2.0**

DolciSSima 2.0 Cod. 76041004

Digital Printing System

Electrical Power: single phase 110/220V, max 3A, 50/60Hz

Is compliant with the Directives (for the parts built by Lesepidado s.r.l.):

- Low Voltage Directive 2006/95/CEE
- Electromagnetic Compatibility Directive EMC 2004/108/CEE
- Regulations EN61000-3-2, EN61000-3-3, EN55024

and with the following harmonized standards

- EN 60950-1:2006, EN 55022:2006, EN 55024:1998+A2:2003
- EN 61000-3-2:2006, EN61000-3-3:1995+A1:2001+A2:2005

And to the directives listed in the Epson original document for the parts built by Epson.

The product was also subjected to the test of suitability for food contact according to the European Directives and Regulations, and the test results are in accordance with global migration, according to the guidelines listed below:

- Directives: 78/142/CEE, 81/432/CEE, 82/711/CEE, 84/500/CEE, 86/388/CEE, 89/397/CEE, 93/8/CEE, 93/10/CEE, 93/11/CEE, 93/111/CEE, 97/48/CEE, 02/72/CEE, 02/17/CEE, 04/14/CEE, 04/19/CEE, 05/31/CEE, 07/19/CEE
- Regulations: 04/1935/CEE, 05/1895/CEE, 06/2023/CEE

The allowed use of the printer "**DOLCISSIMA 2.0**" and the limitations of use and of responsibility are described in the *User's Guide*, that includes the operating instructions and the precautions for use of the chemical consumables used during the printing process.

The technical dossier of the printer "**DOLCISSIMA 2.0**" is filed by the operating headquarters of Lesepidado Srl.

Osteria Grande, January 2014

LESEPIDADO S.r.l.

Electronic copy of the document filed by Lesepidado S.r.l.



DECLARATION of CONFORMITY

Manufacturer: SEIKO EPSON CORPORATION
 Address: 3-5, Owa 3-chome, Surwa-shi Nagano-ken 392-8502 Japan Telephone: 81-266-52-3131 Fax: 81-266-52-8409

Representative: EPSON FRANCE S.A.
 Address: PARC TECHNOLOGIQUE EUROPARC 60, RUE AUGUSTE PERRRET 94043 CRETEIL CEDEX FRANCE Telephone: 33-1-56715720 Fax: 33-1-56715726

Declares under our responsibility that the product:

Brand Name: EPSON
 Product Name: Ink Jet Printer
 Model: K122A (EPSON Stylus Pro 4400/4800/4450/4880)
 For more details, please refer to the product description

Options:

Product Name	Model
Ink Cartridge(4Colors)	T5641,T5642,T5643,T5644,T5645,T5646,T5647 and T5649
Ink Cartridge(8Colors)	T5651,T5652,T5653,T5654,T5655,T5656,T5657 and T5659
Ink Cartridge(4Colors)	T6132,T6133,T6134,T6138,T6141,T6142,T6143,T6144 and T6148
Ink Cartridge(8Colors)	T6051,T6052,T6053,T6054,T6055,T6056,T6057,T6059,T605B,T605C,T6061,T6062,T6063,T6064,T6065,T6066,T6067 and T6069
Conversion Ink Cartridge	T564A and T605A

Conforms to the following Directive(s) and Norm(s):

- Directive 2004/108/EC:
 EN 55022 (2006+A1:2007), Class A
 EN 55024 (1998+A1:2001+A2:2003)
 EN 61000-3-2 (2006+A1:2009+A2:2009)
 EN 61000-3-3 (2008)
- Directive 2006/95/EC:
 EN 60950-1 (2006+A11:2009)
 EN 62311 (2008)

The year in which the CE marking was affixed, is 2005.

Aug. 6th. 2012


 Mitsunaki Tabei
 General Manager of
 COMMERCIAL PRINTER CS QUALITY ASSURANCE DEPARTMENT
 SEIKO EPSON CORPORATION

BK122A0-E09 Declared based on "Technical Data File, 31st, July, 2012." Model K122A